

Broil King®



Broil King

CROWN 420

8652-52

8652-53



Broil King

CROWN S 420

8653-52

8653-53



Broil King

CROWN 440

8652-62

8652-63



Broil King

CROWN S 440

8653-62

8653-63



Broil King

CROWN 490

8652-82

8652-83



Broil King

 
 
 
 
 
 
 
 
 
 
 
 
CROWN S 490

8653-82


8653-83




HARDWARE INCLUDED

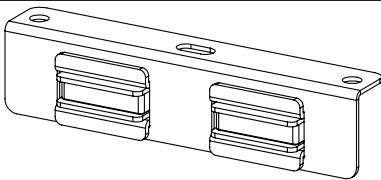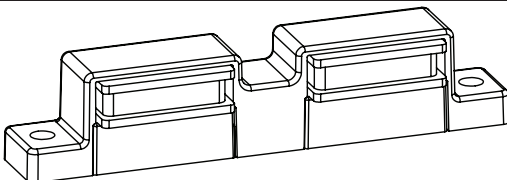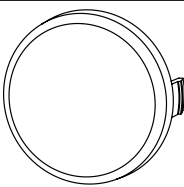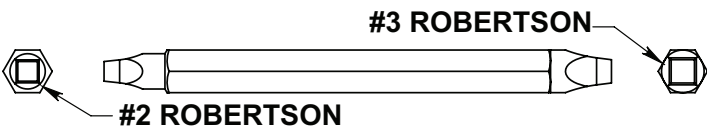S21124		(4)	Y-29304		(2)
Y-12865		(12)	Y-11793		(4)
Y-11551		(2)	Y-12124		(2)
56039-214A		(1)	Y-12229		(1)
S21235		(2)	S21233		(2)
32001-151		(4)	S21084		(8)
S21125		(2)			
20005-000					(1)




 
TOOLS REQUIRED

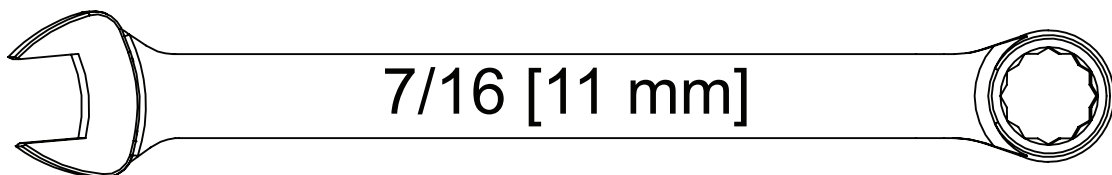



1

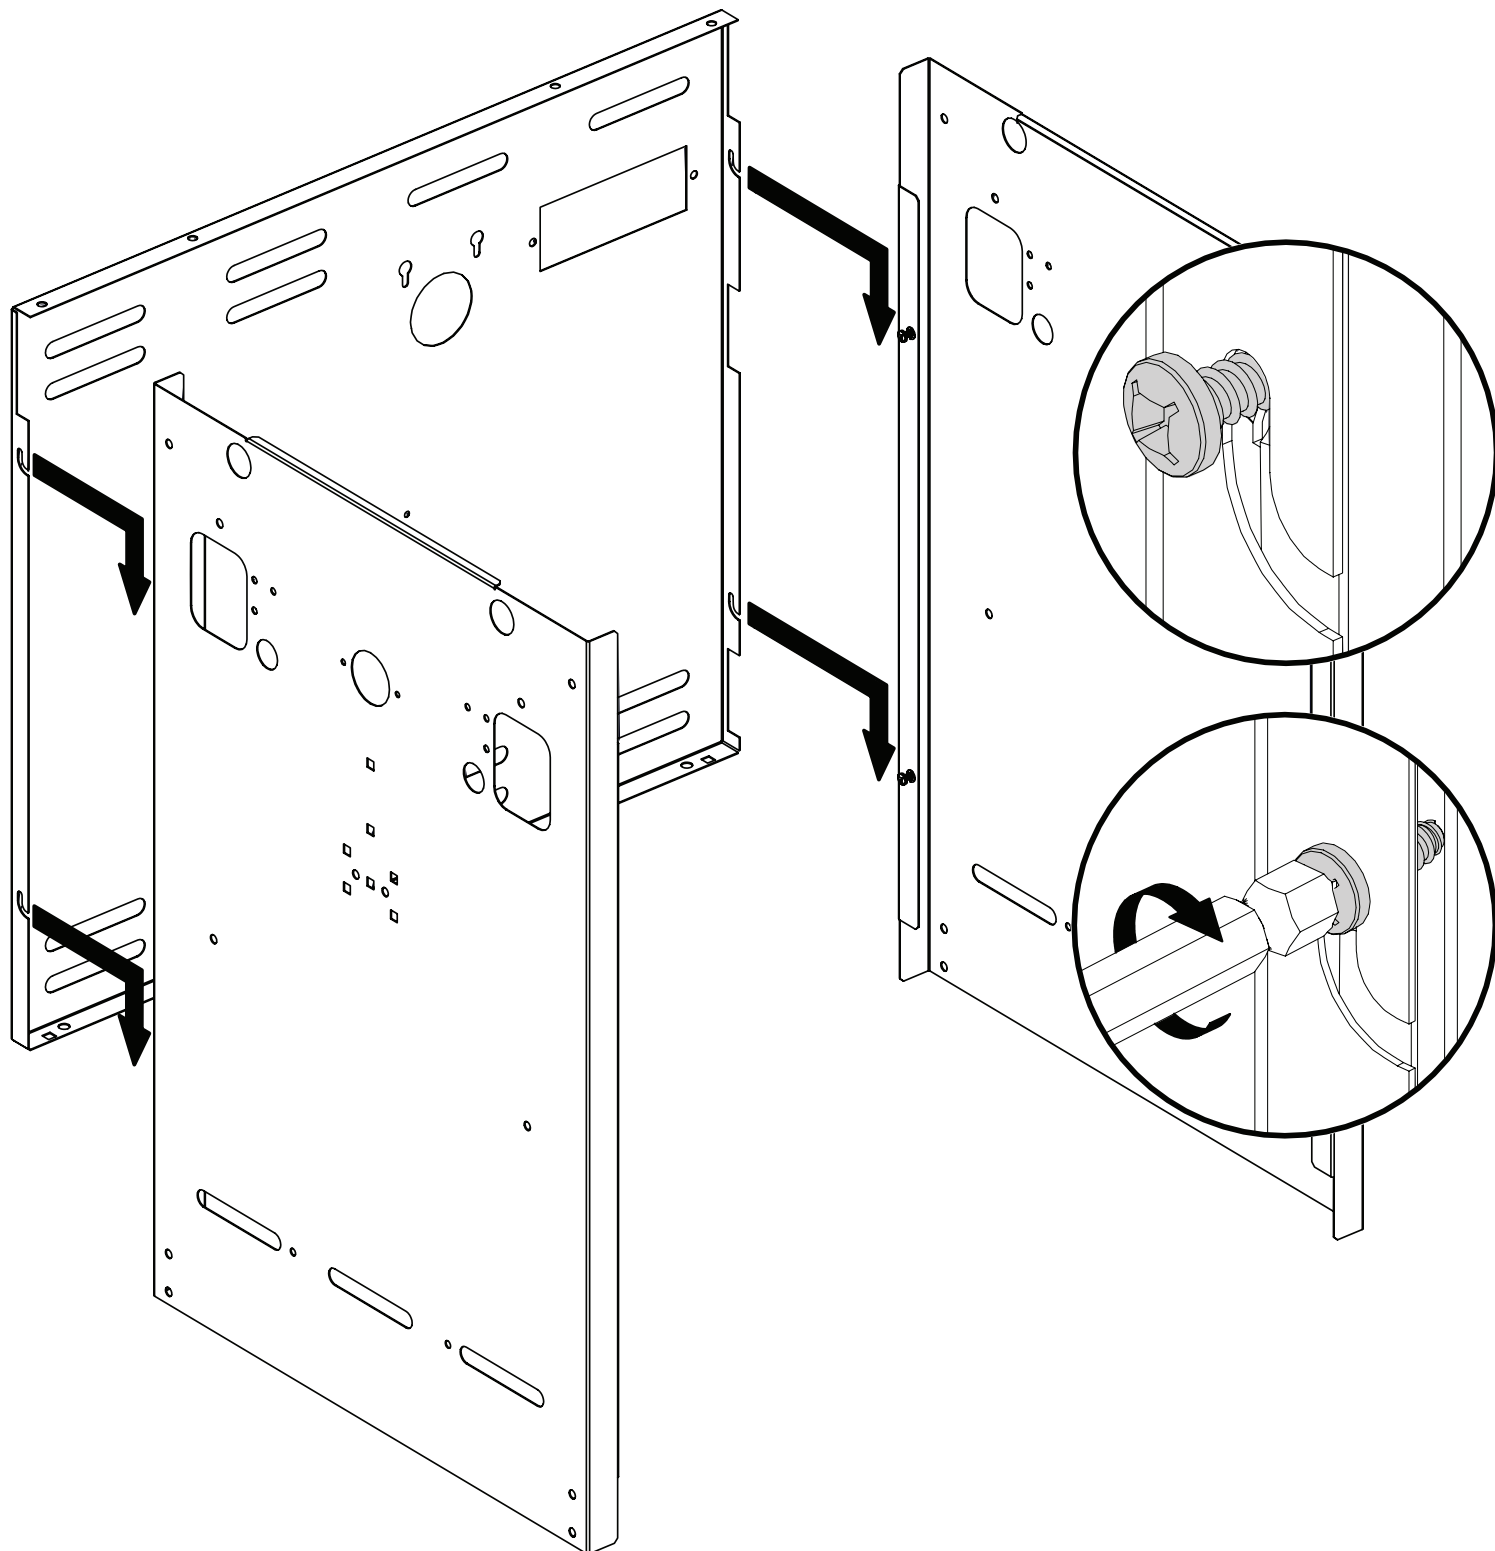 



2

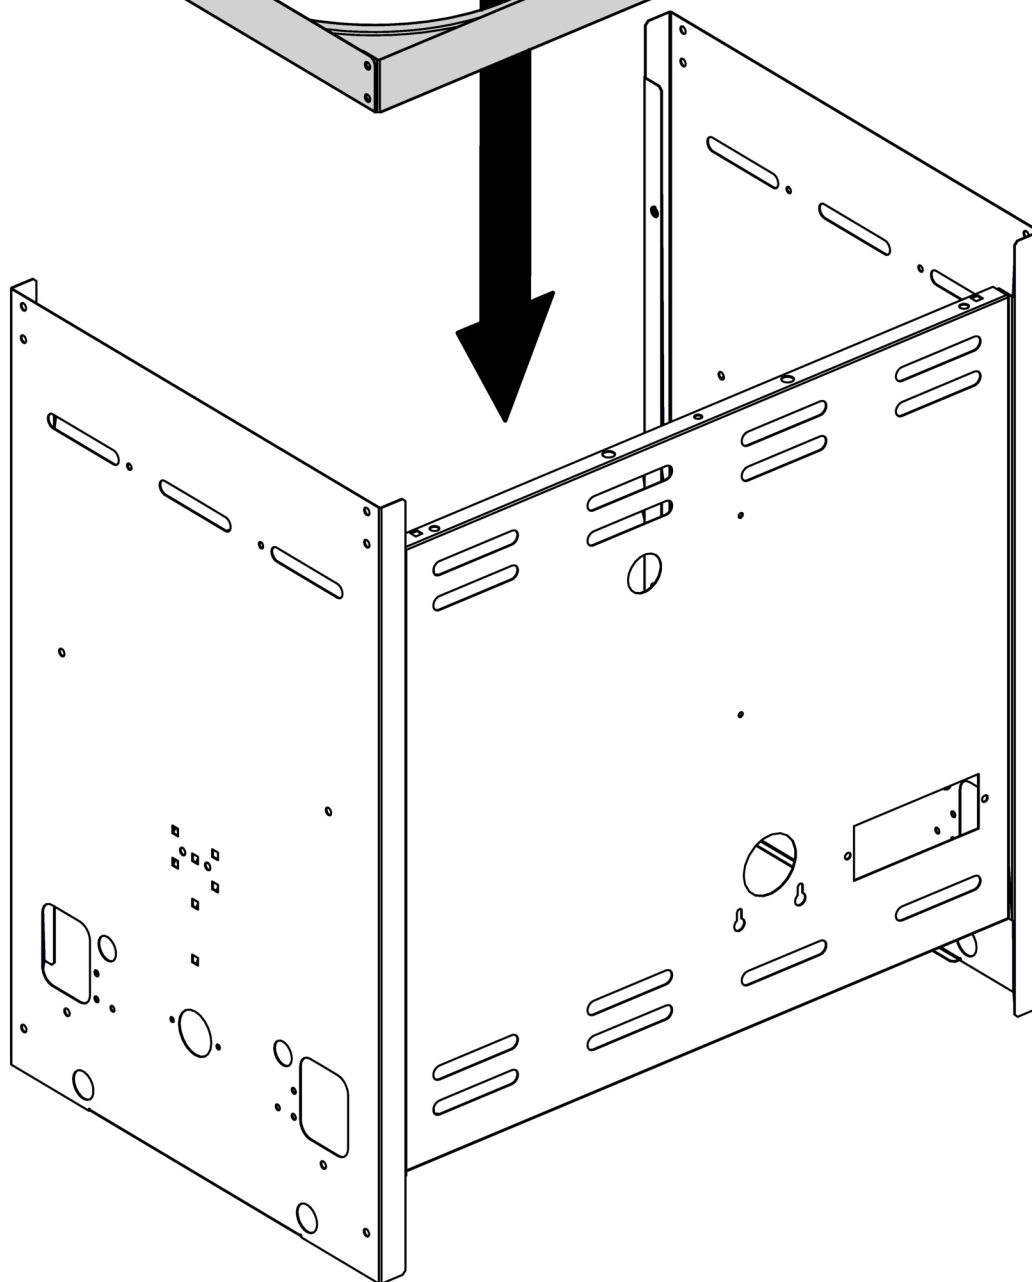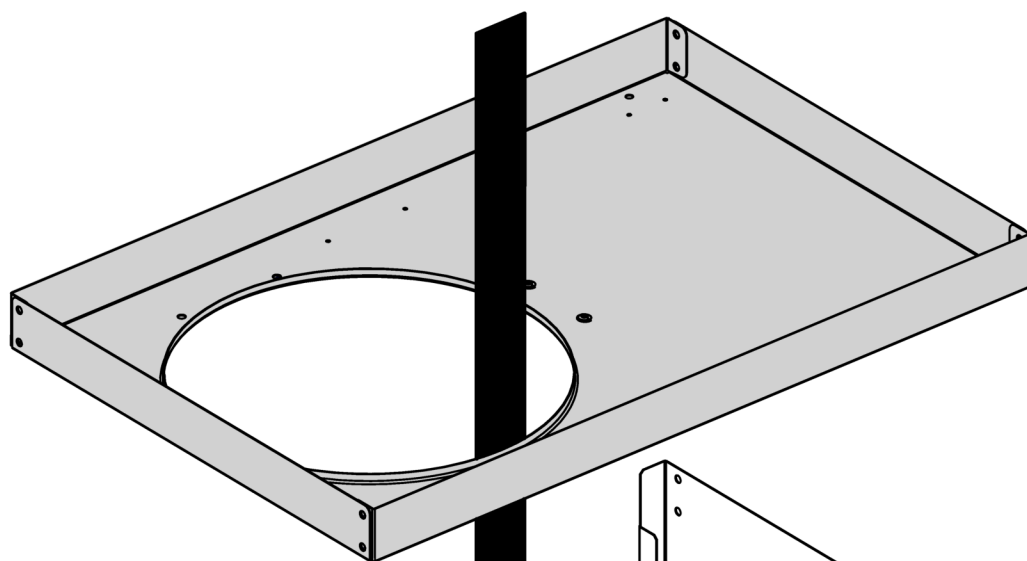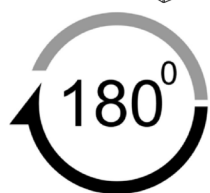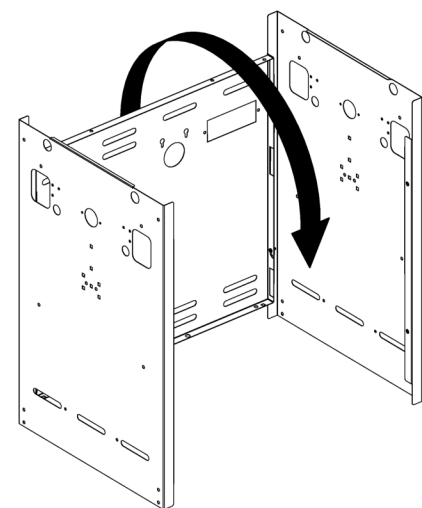    

3

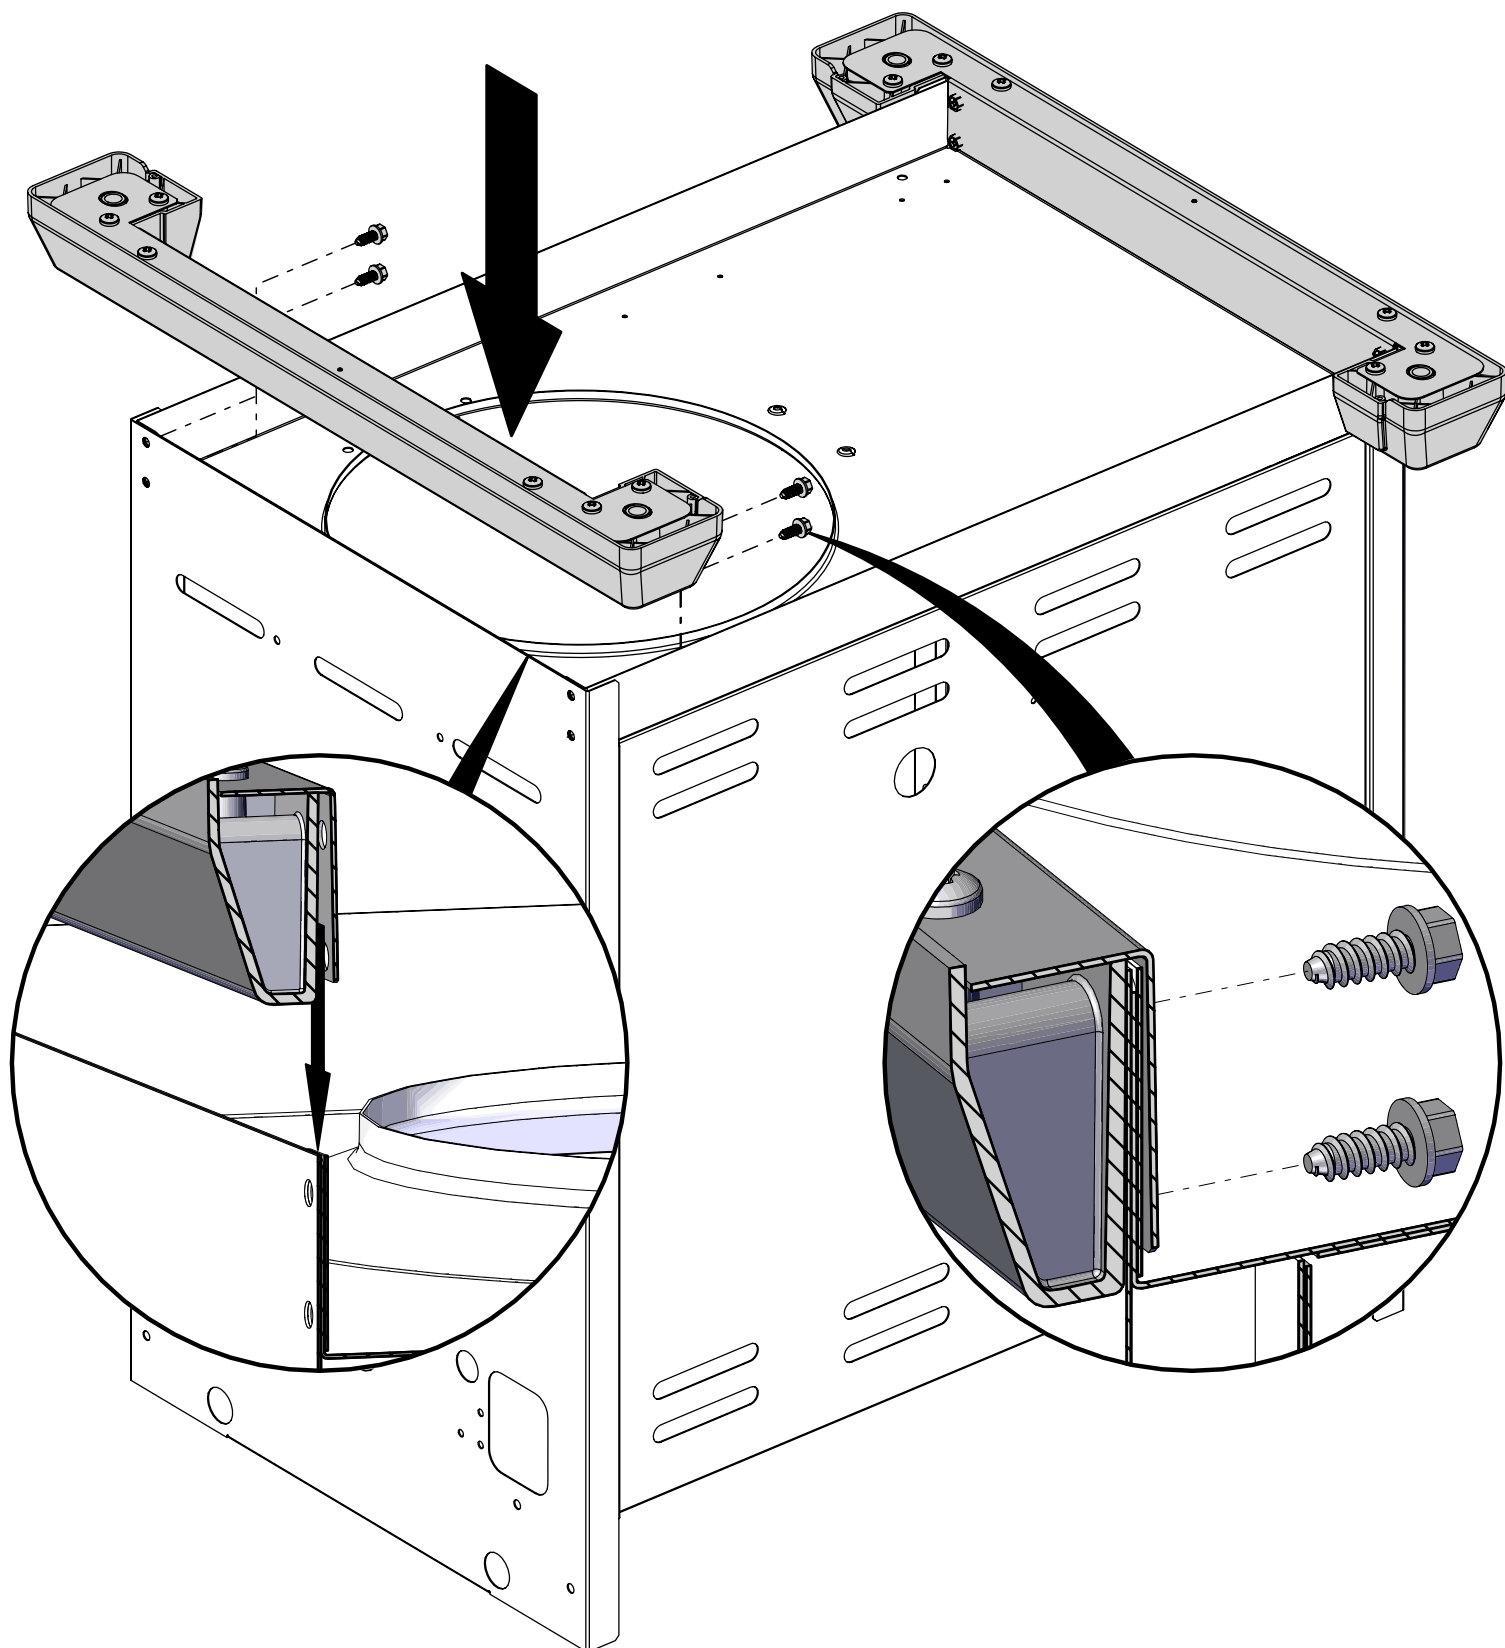 
 


4

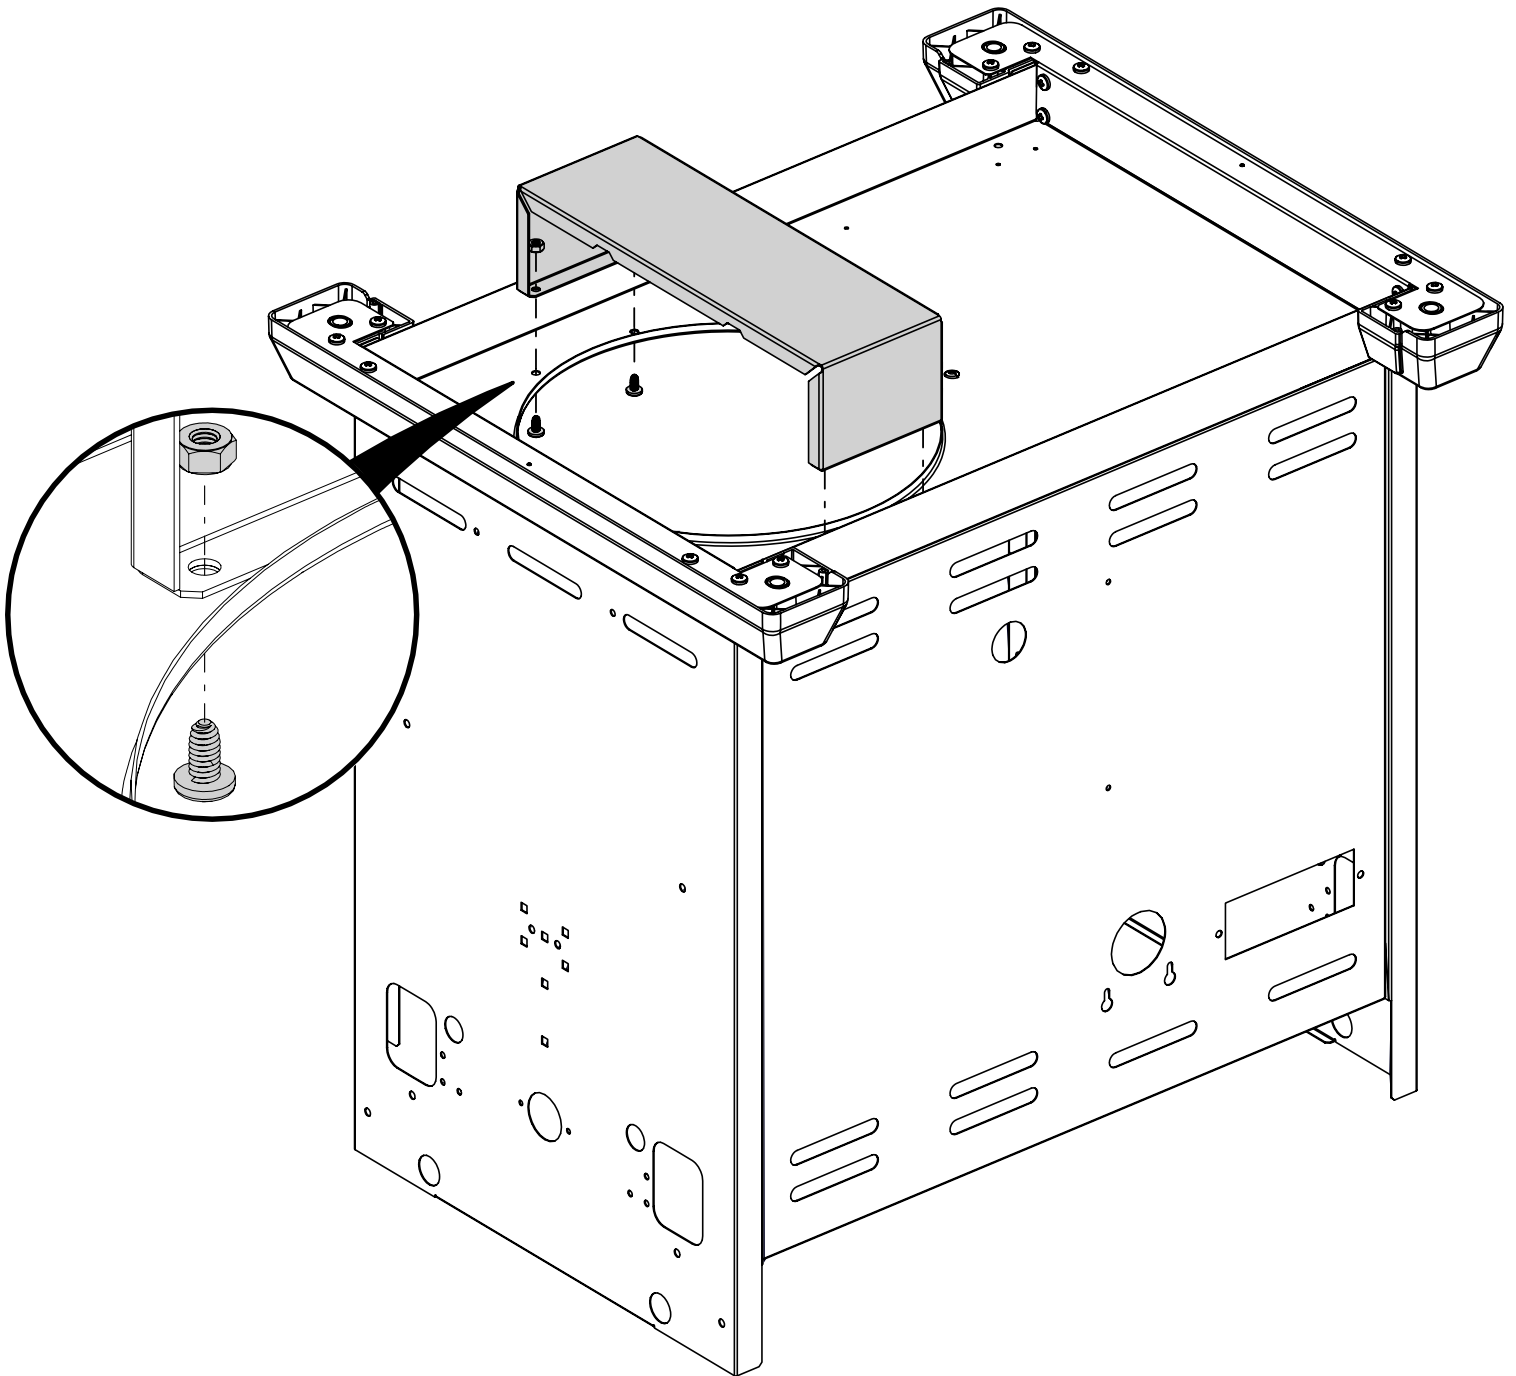  


5

  (2) 

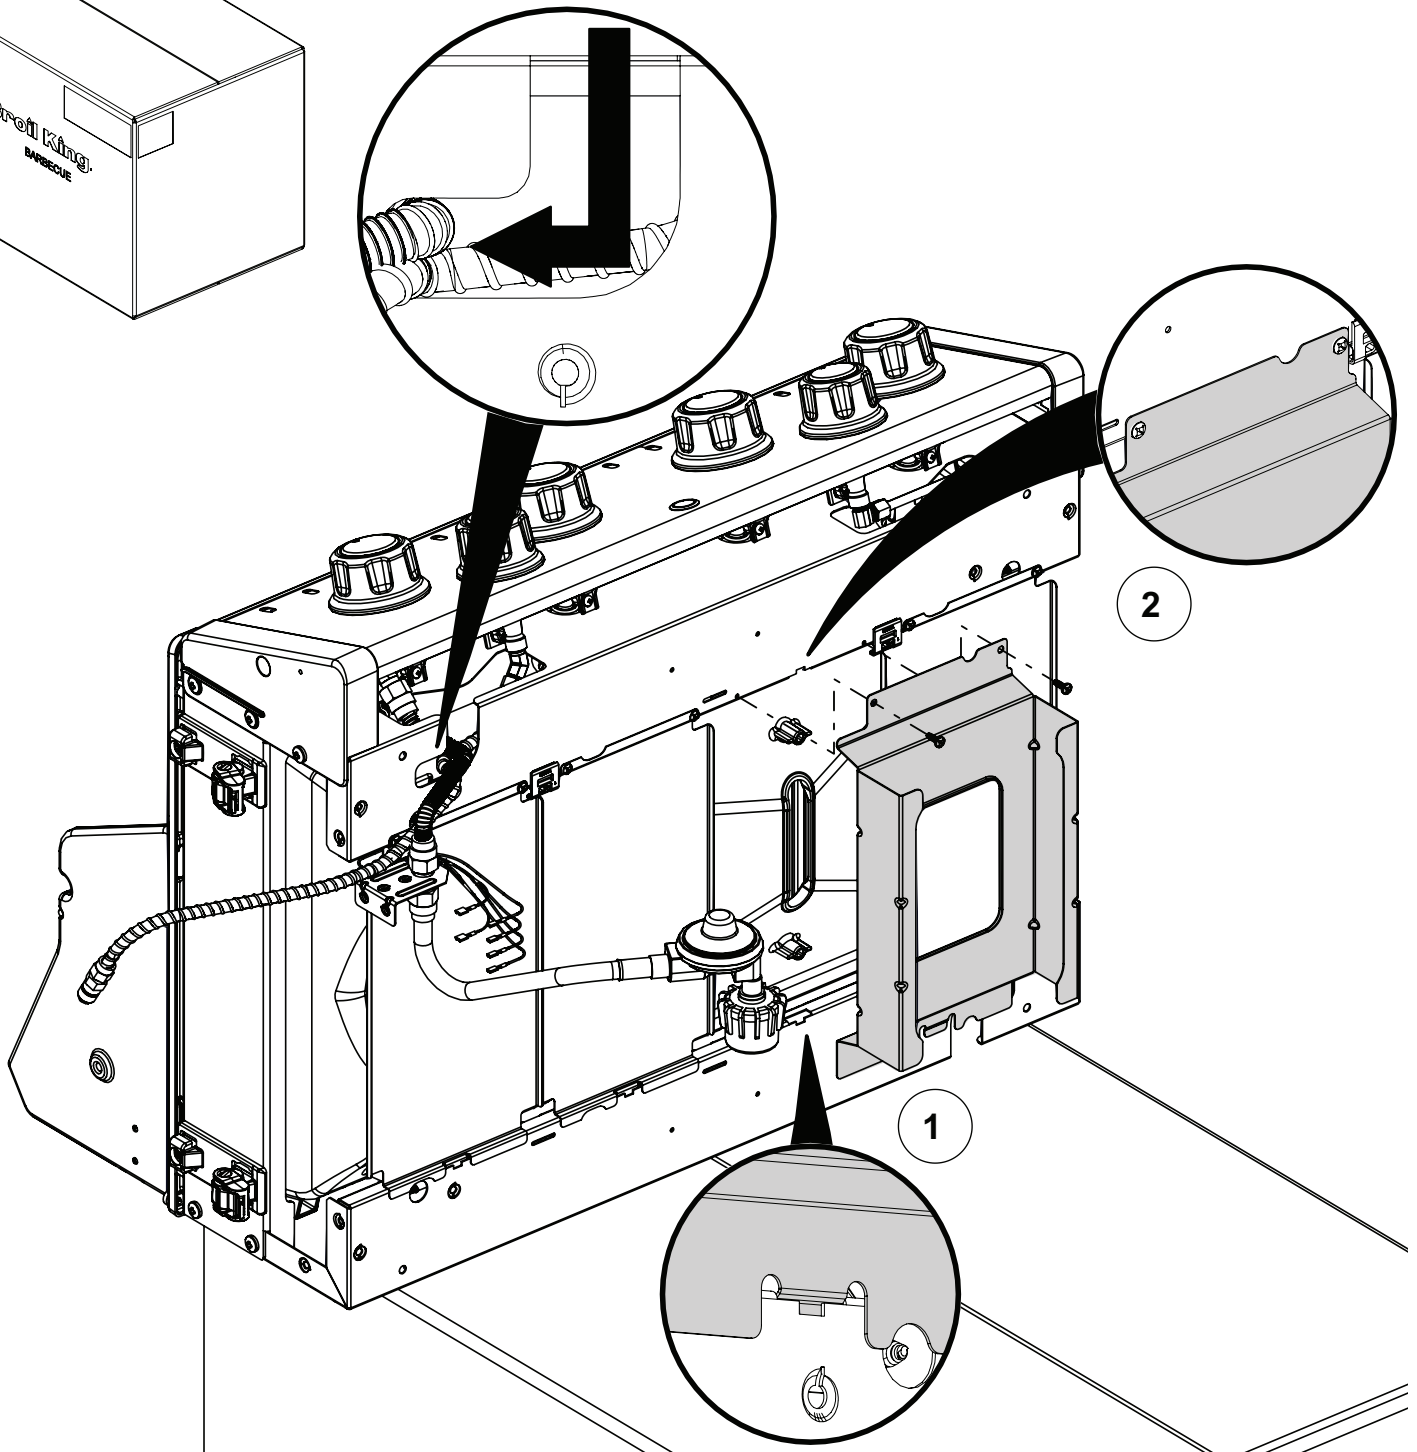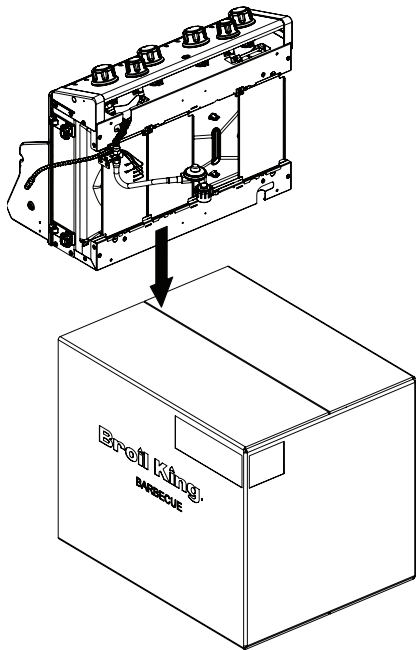


6




 
(2) (1)

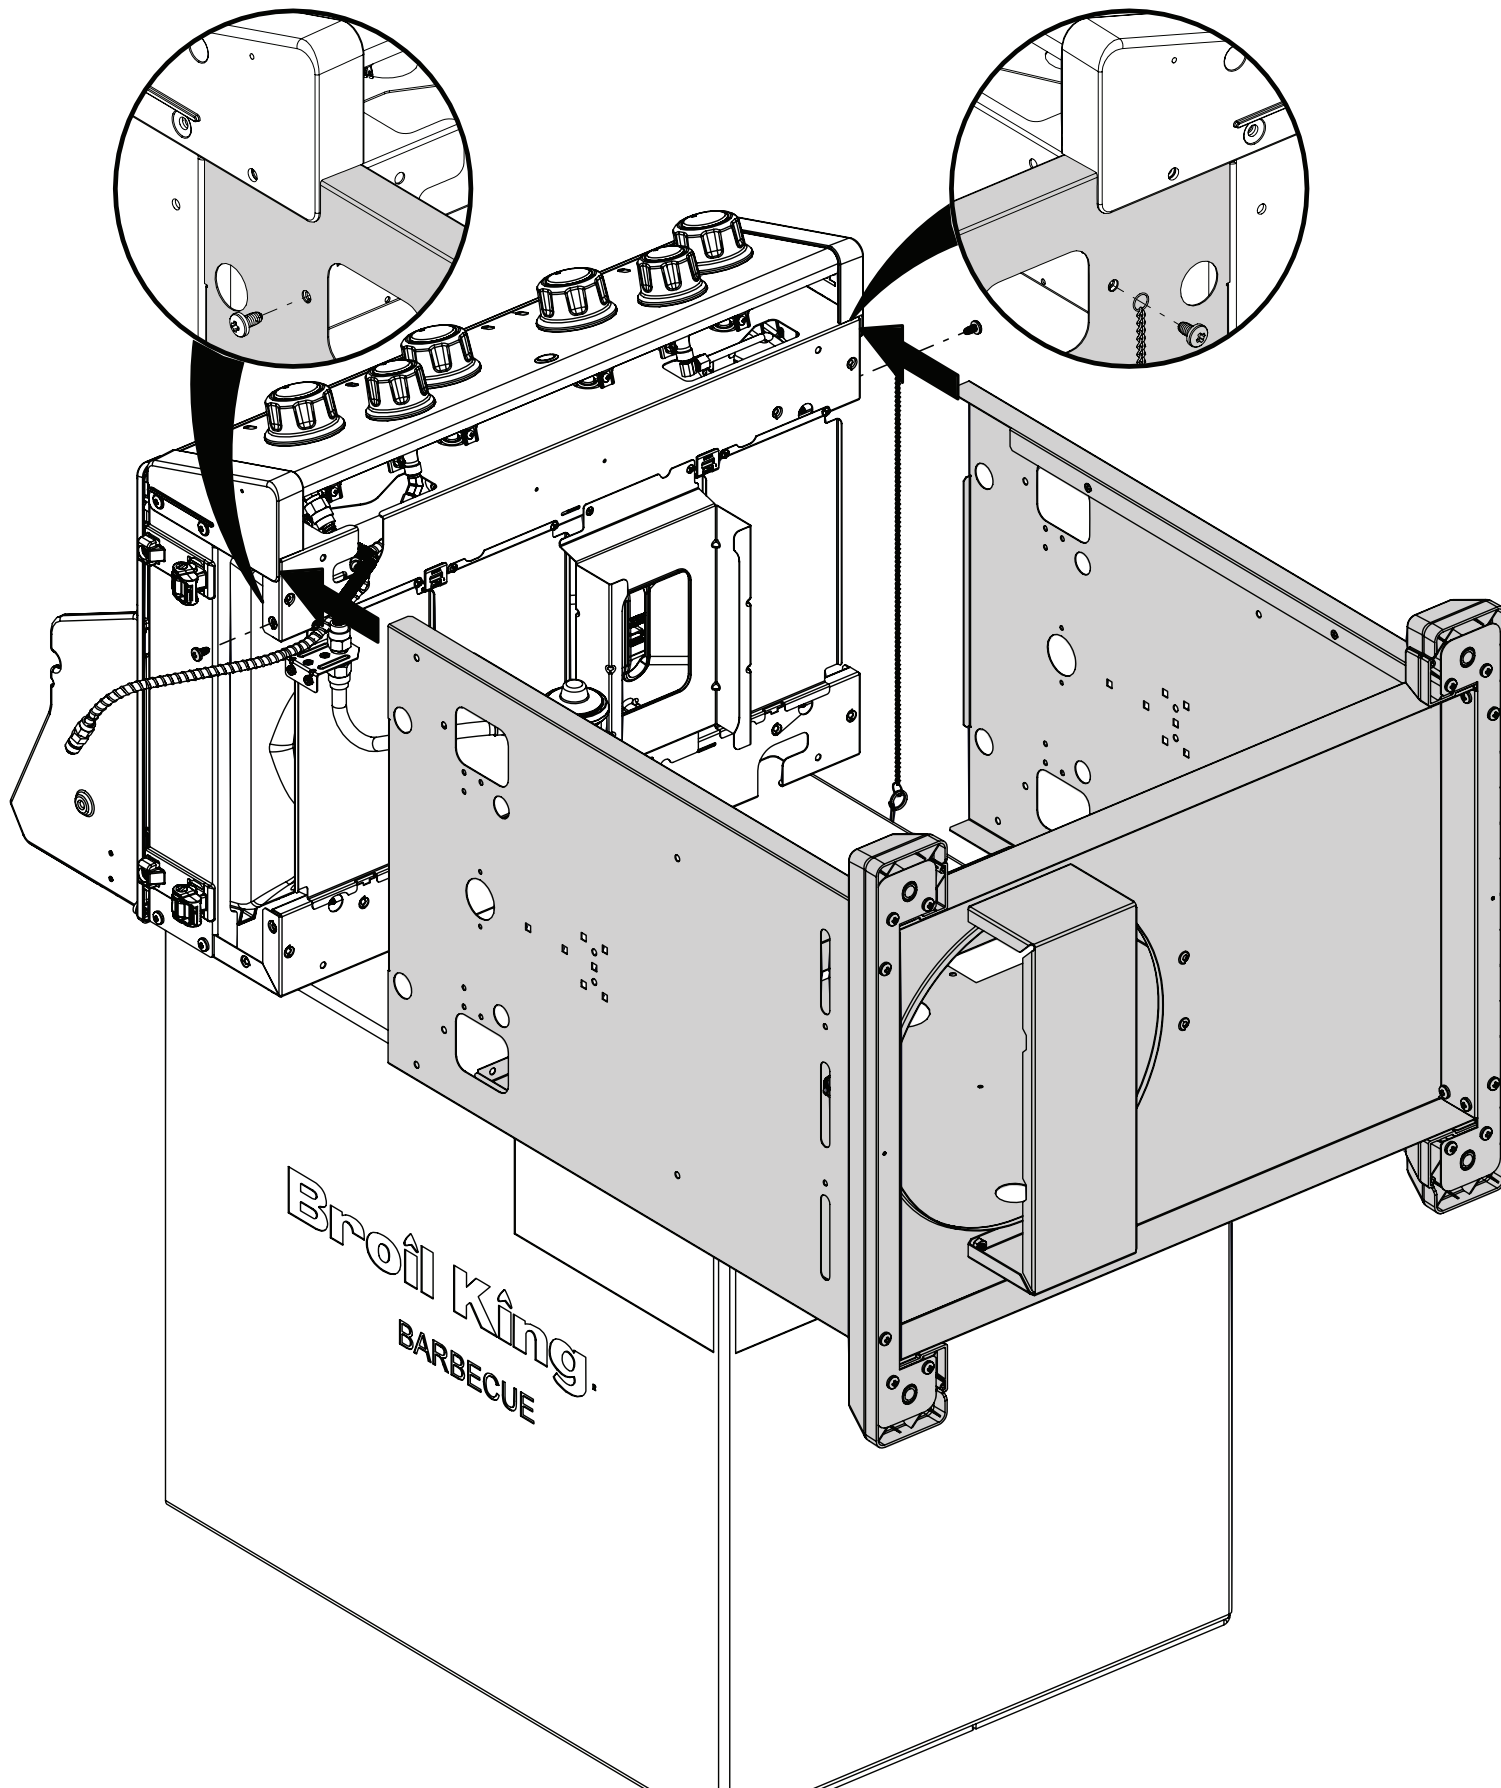

7

     
(2) 

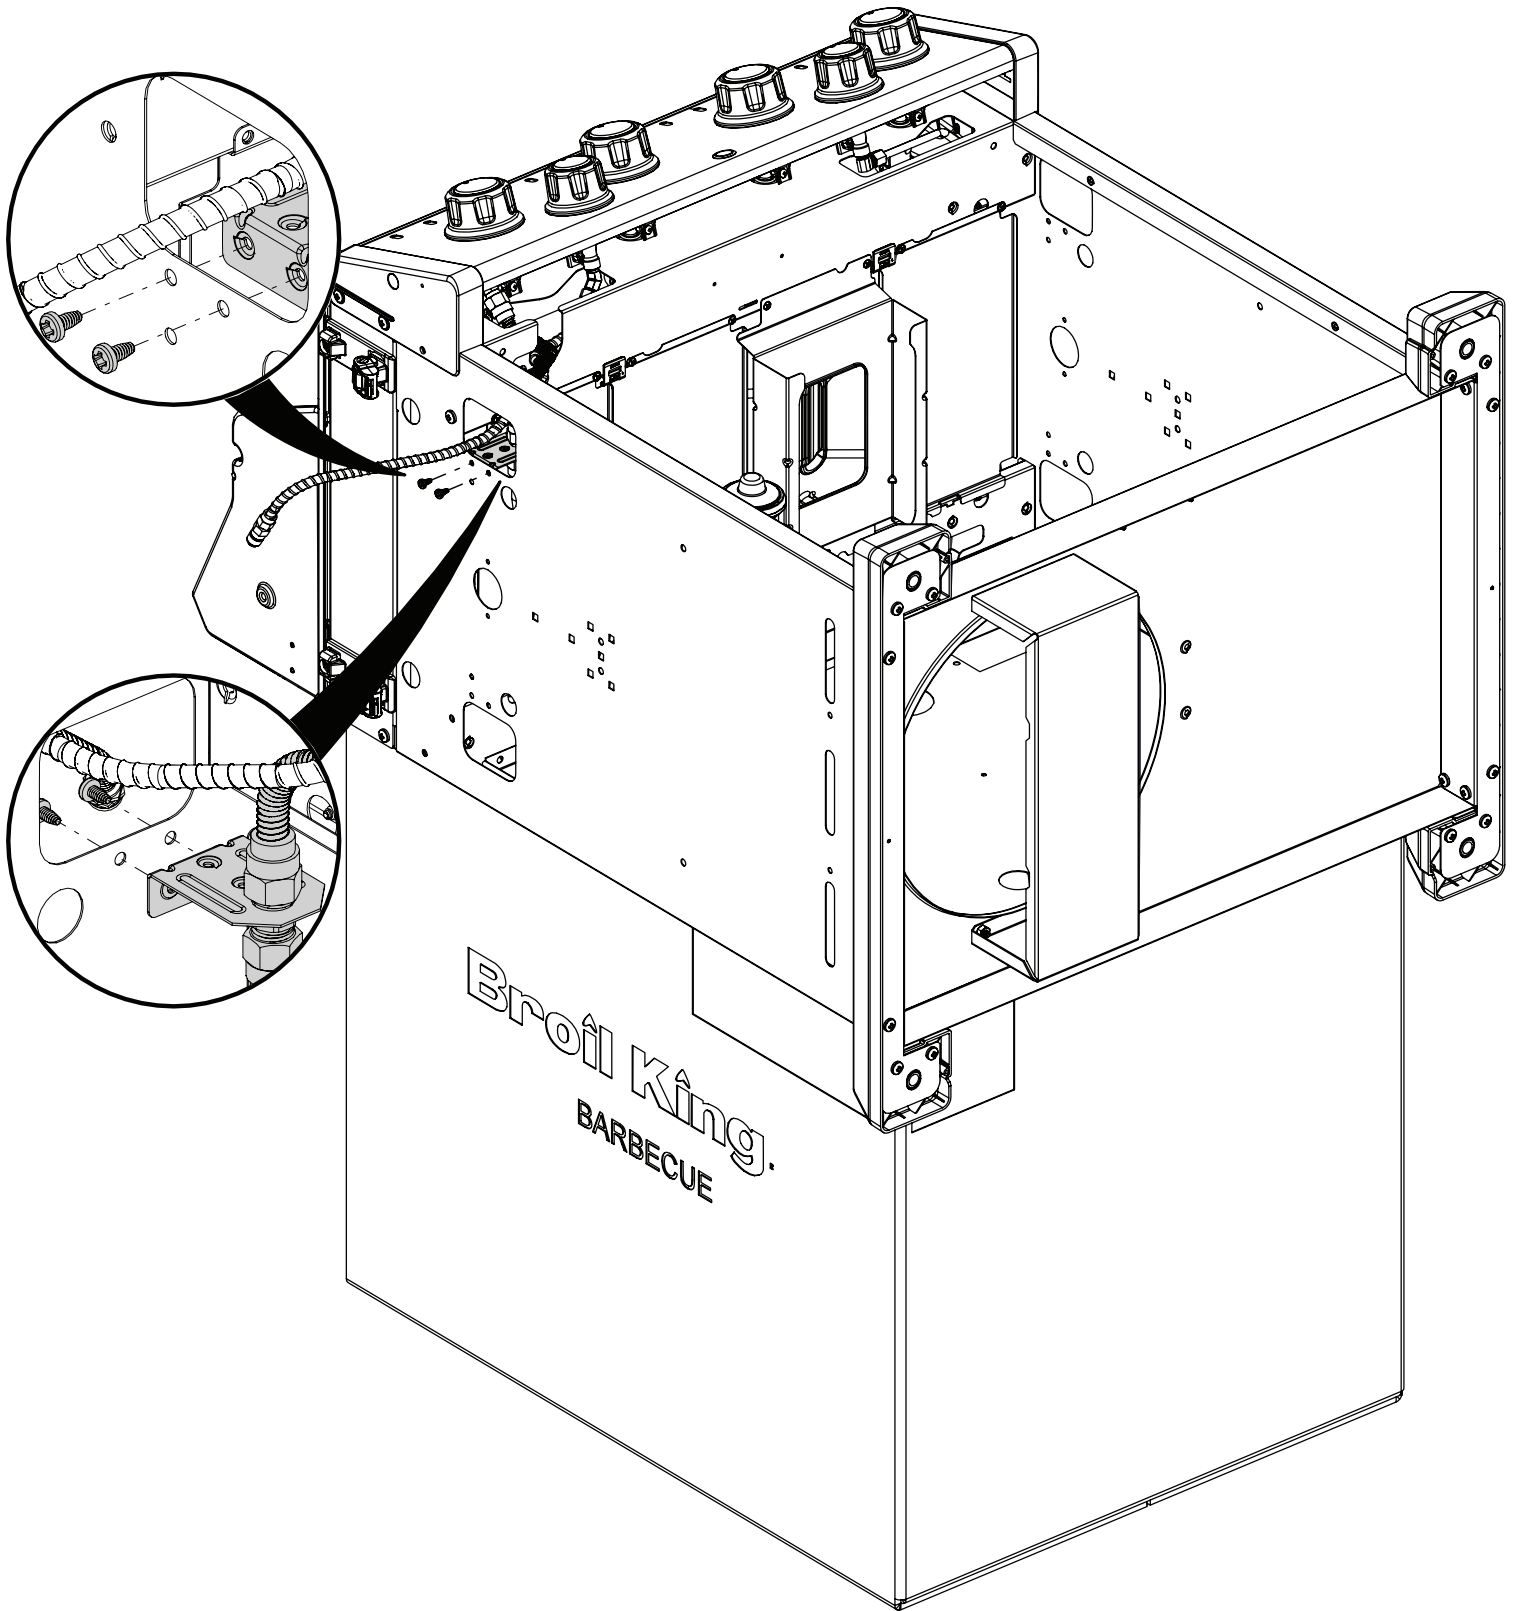


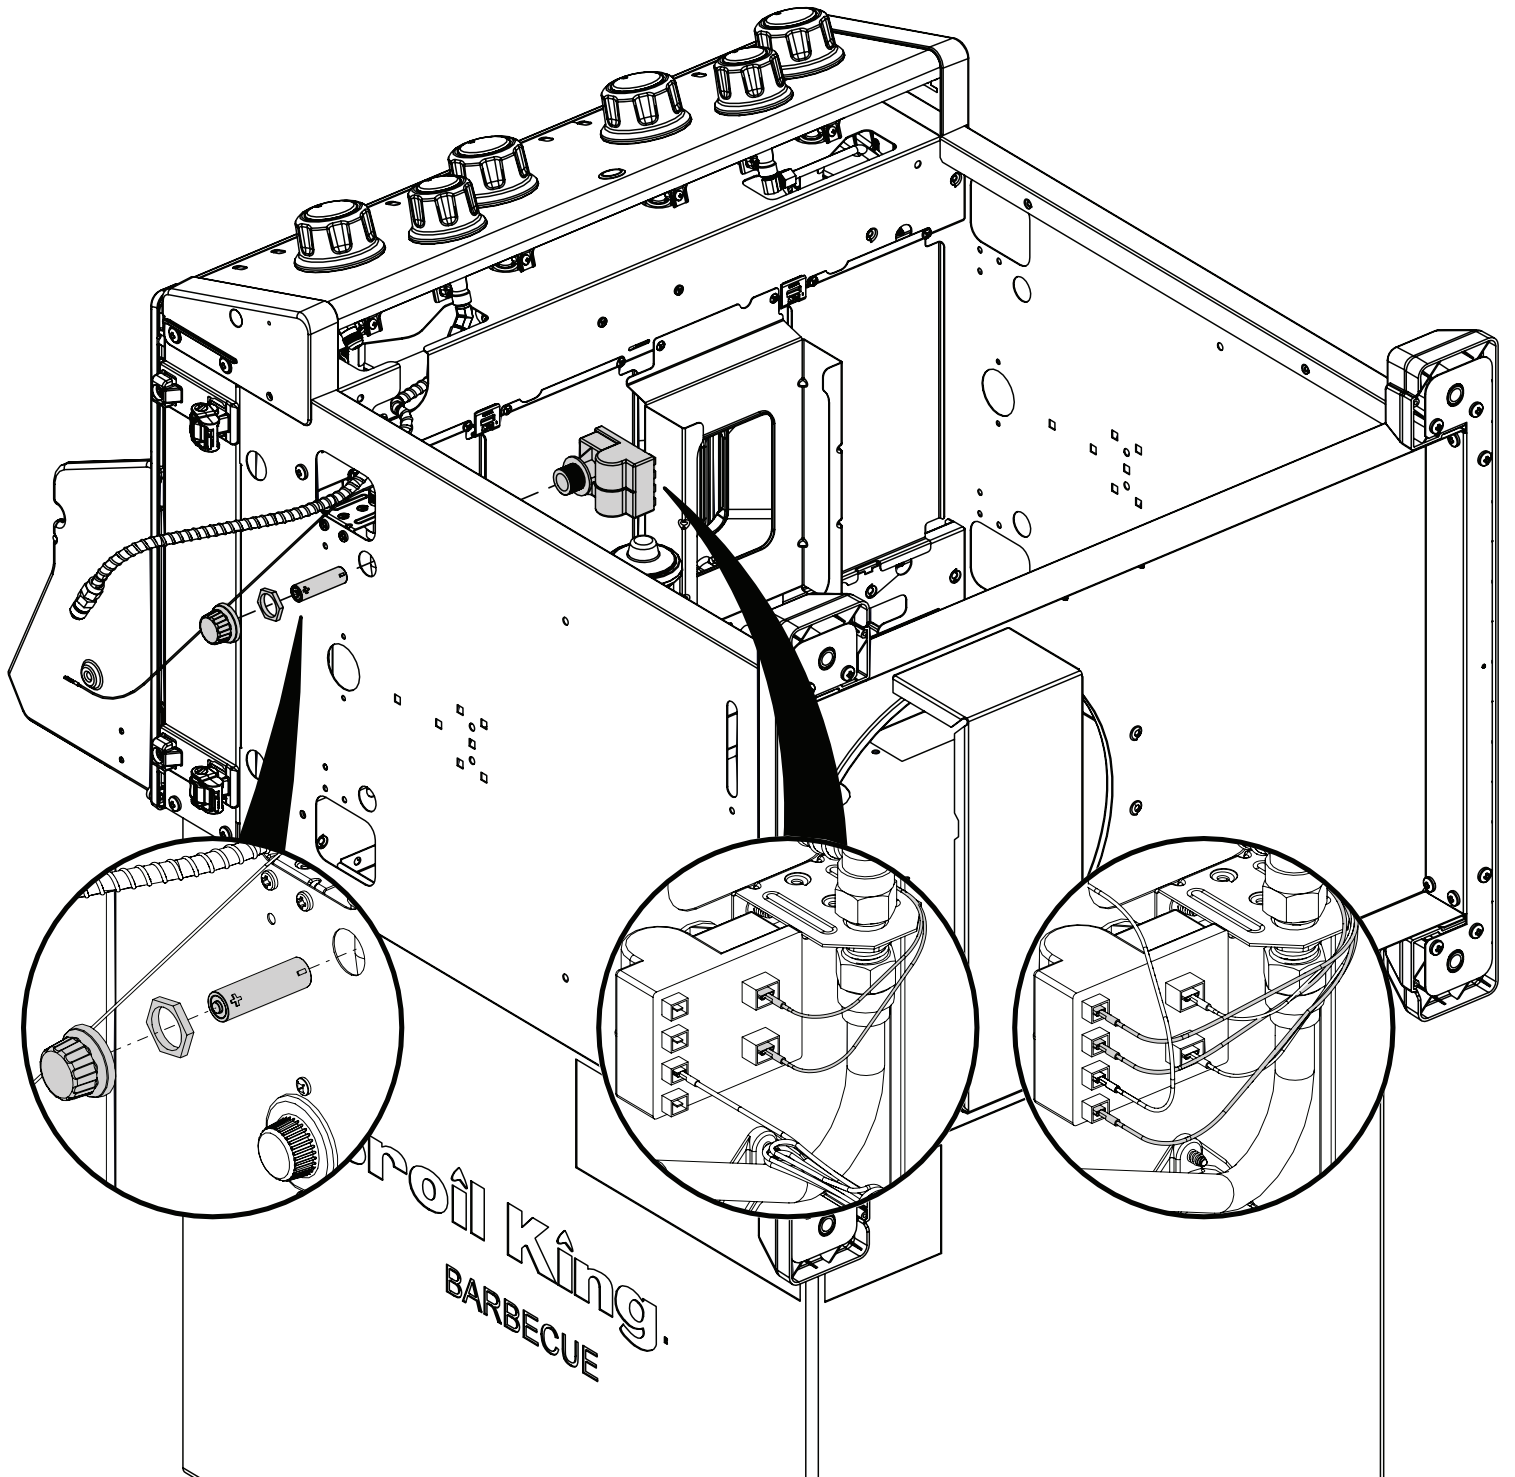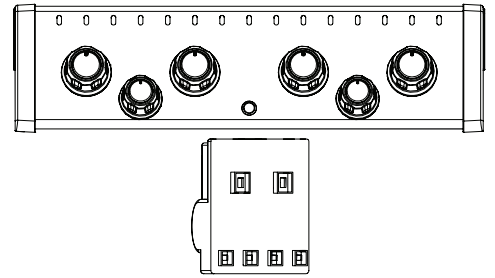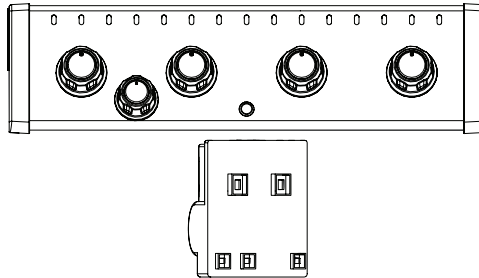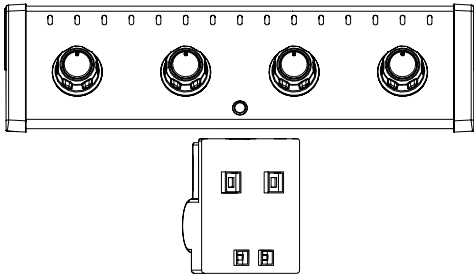


9



 
(4) 

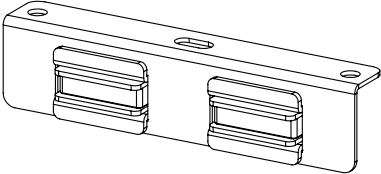 (1) 



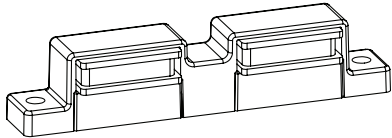 
(1) 

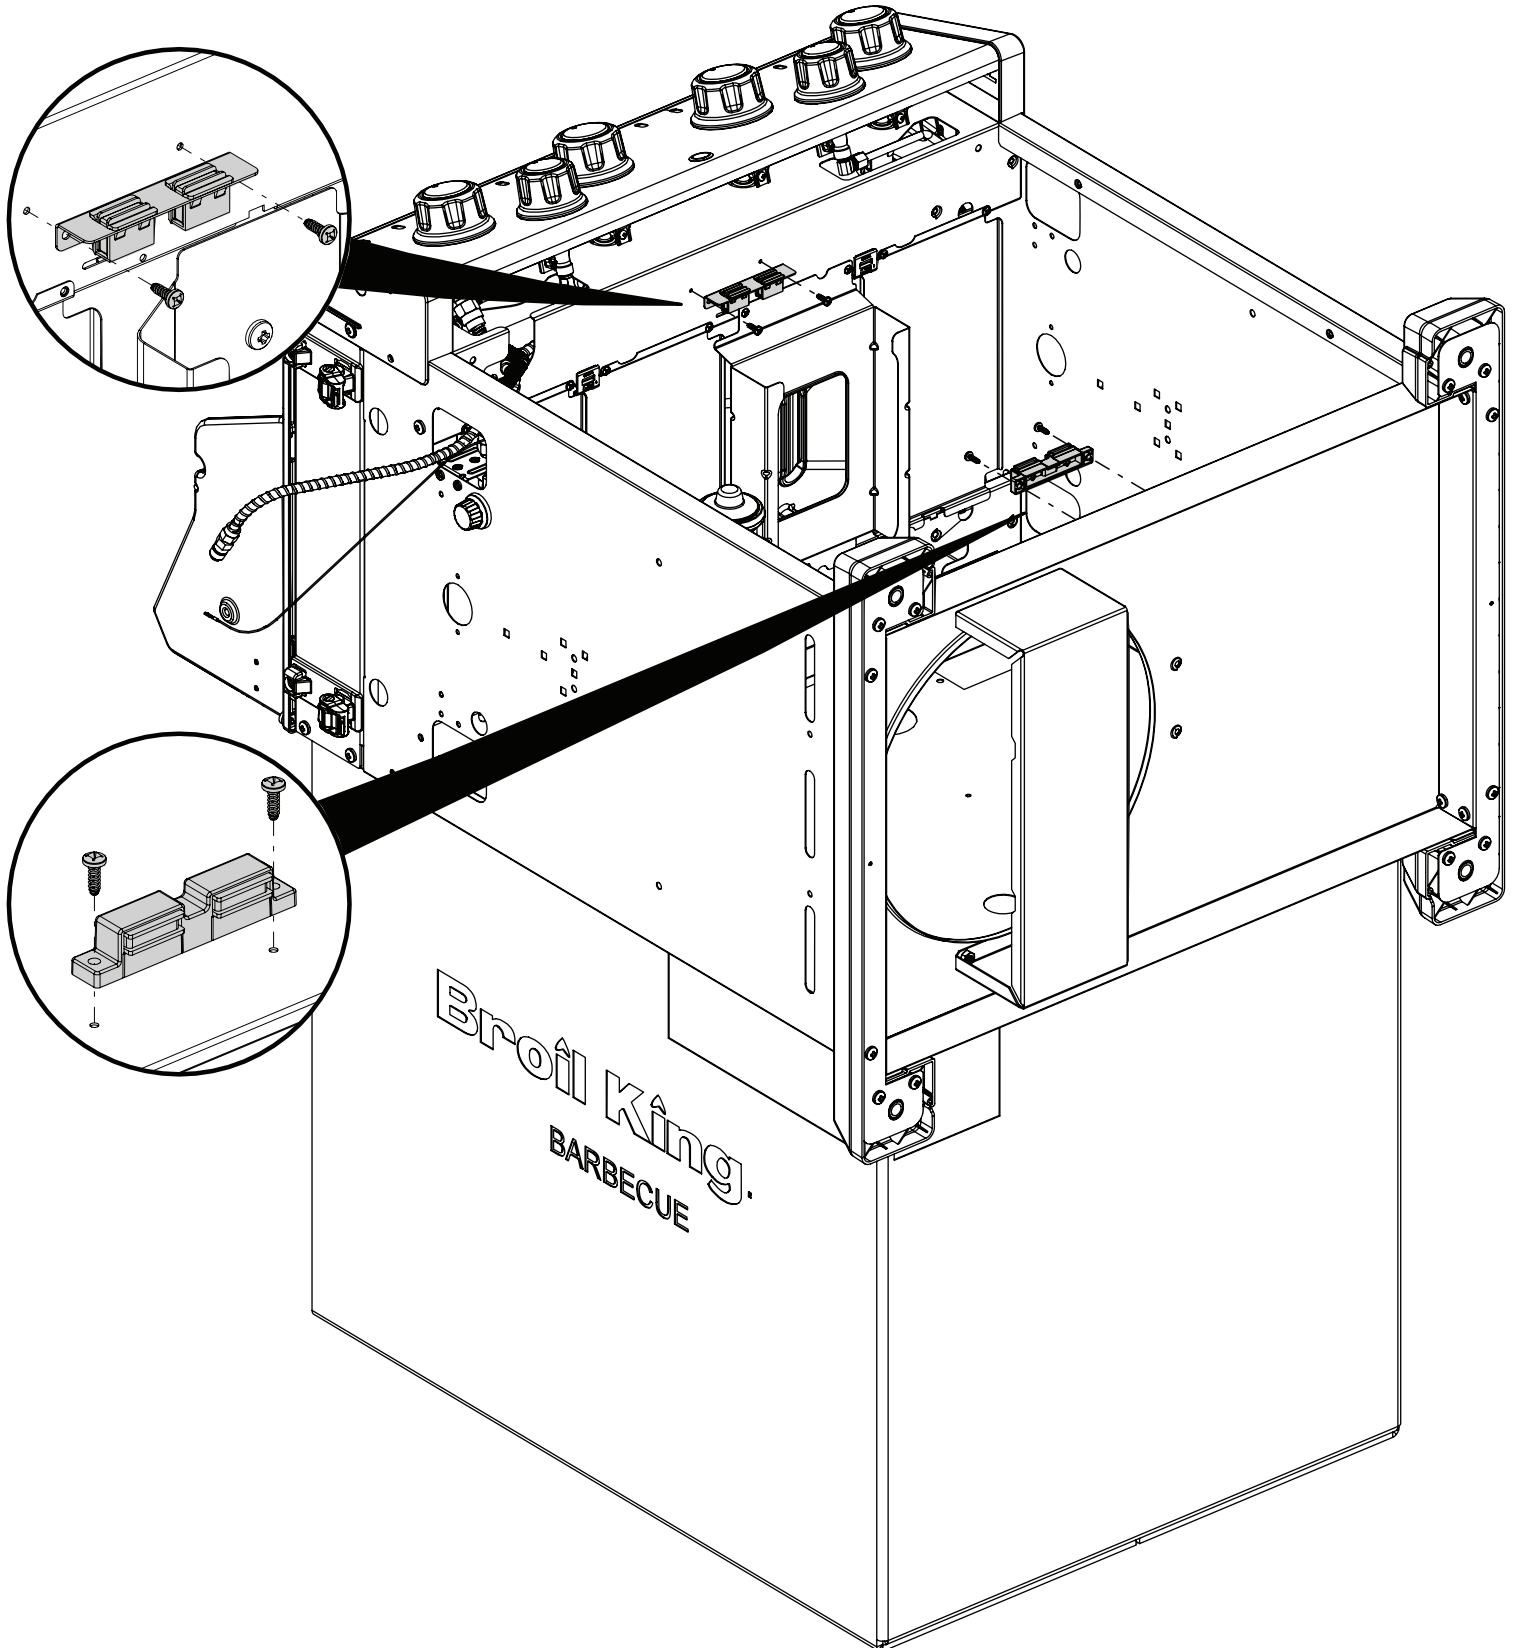


10

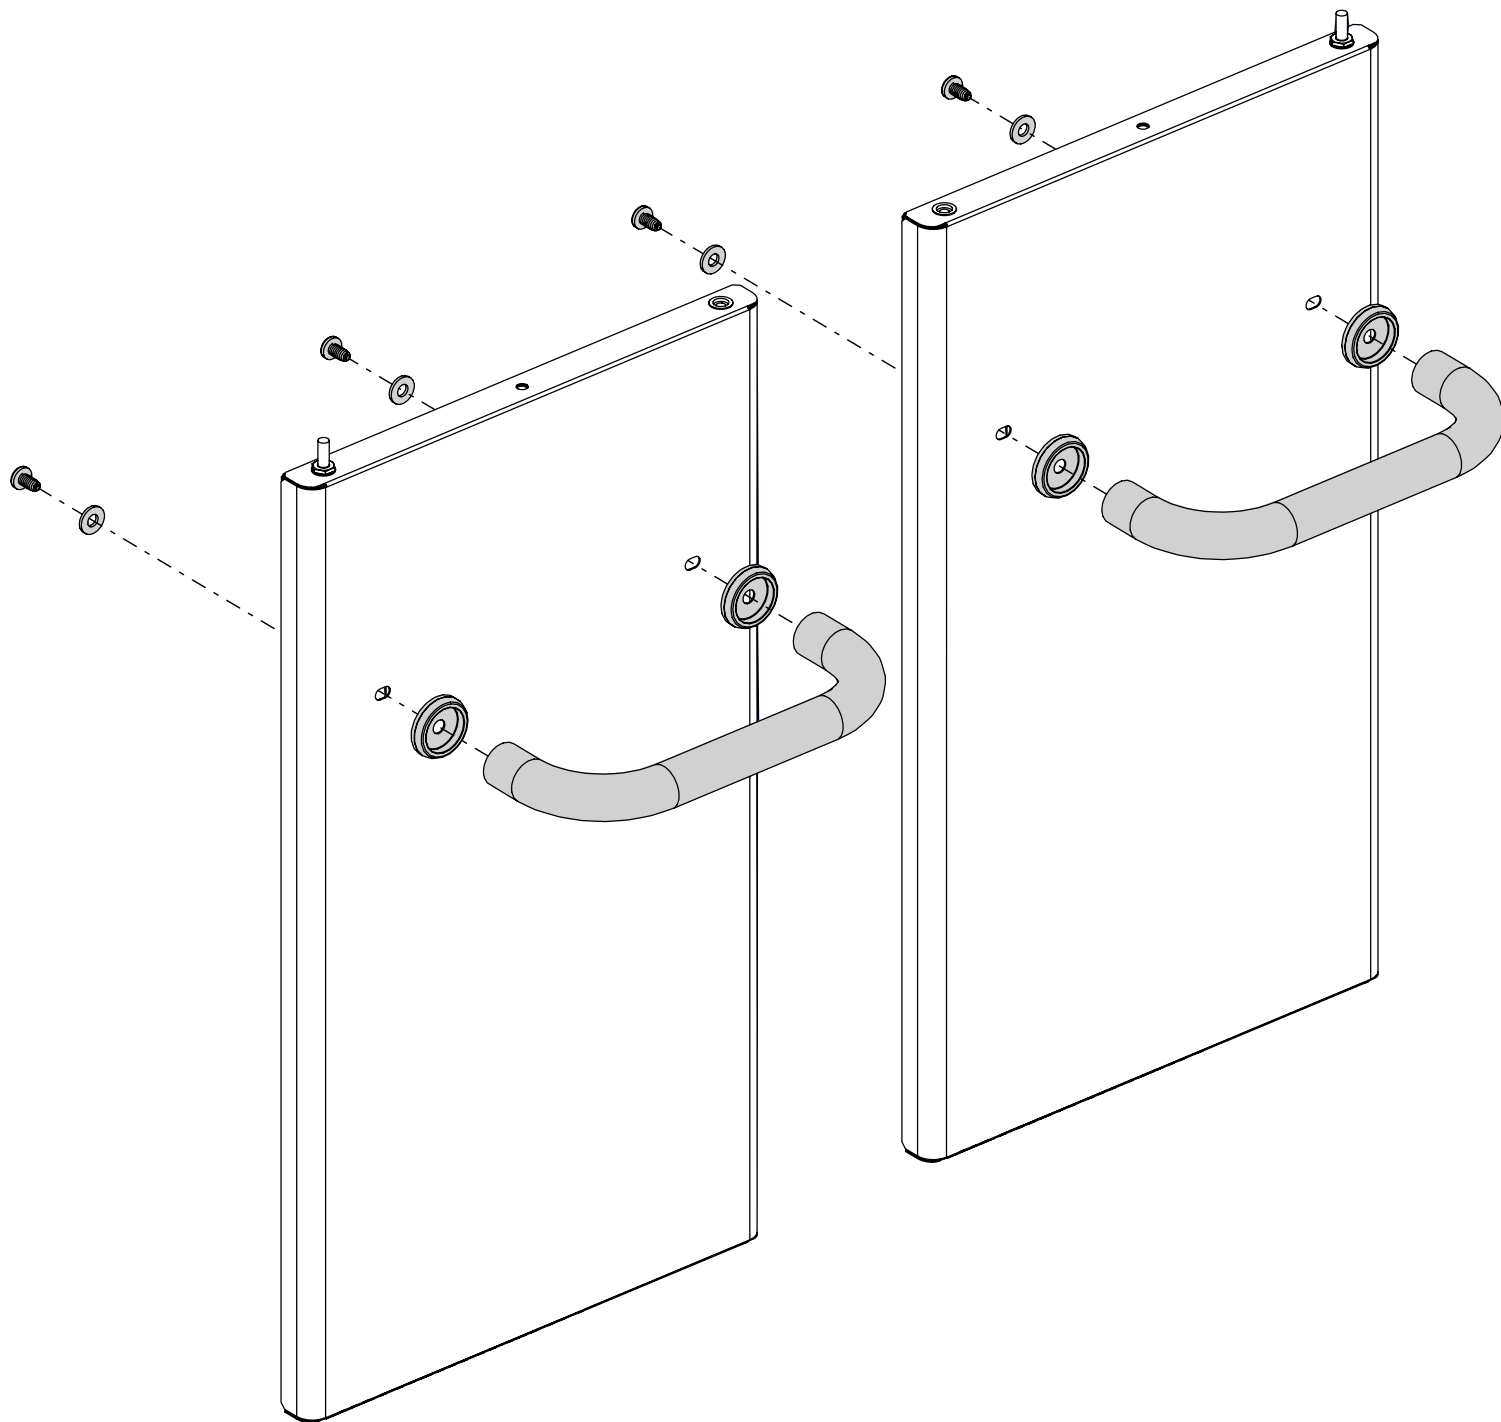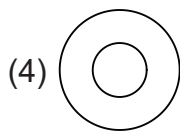   



11

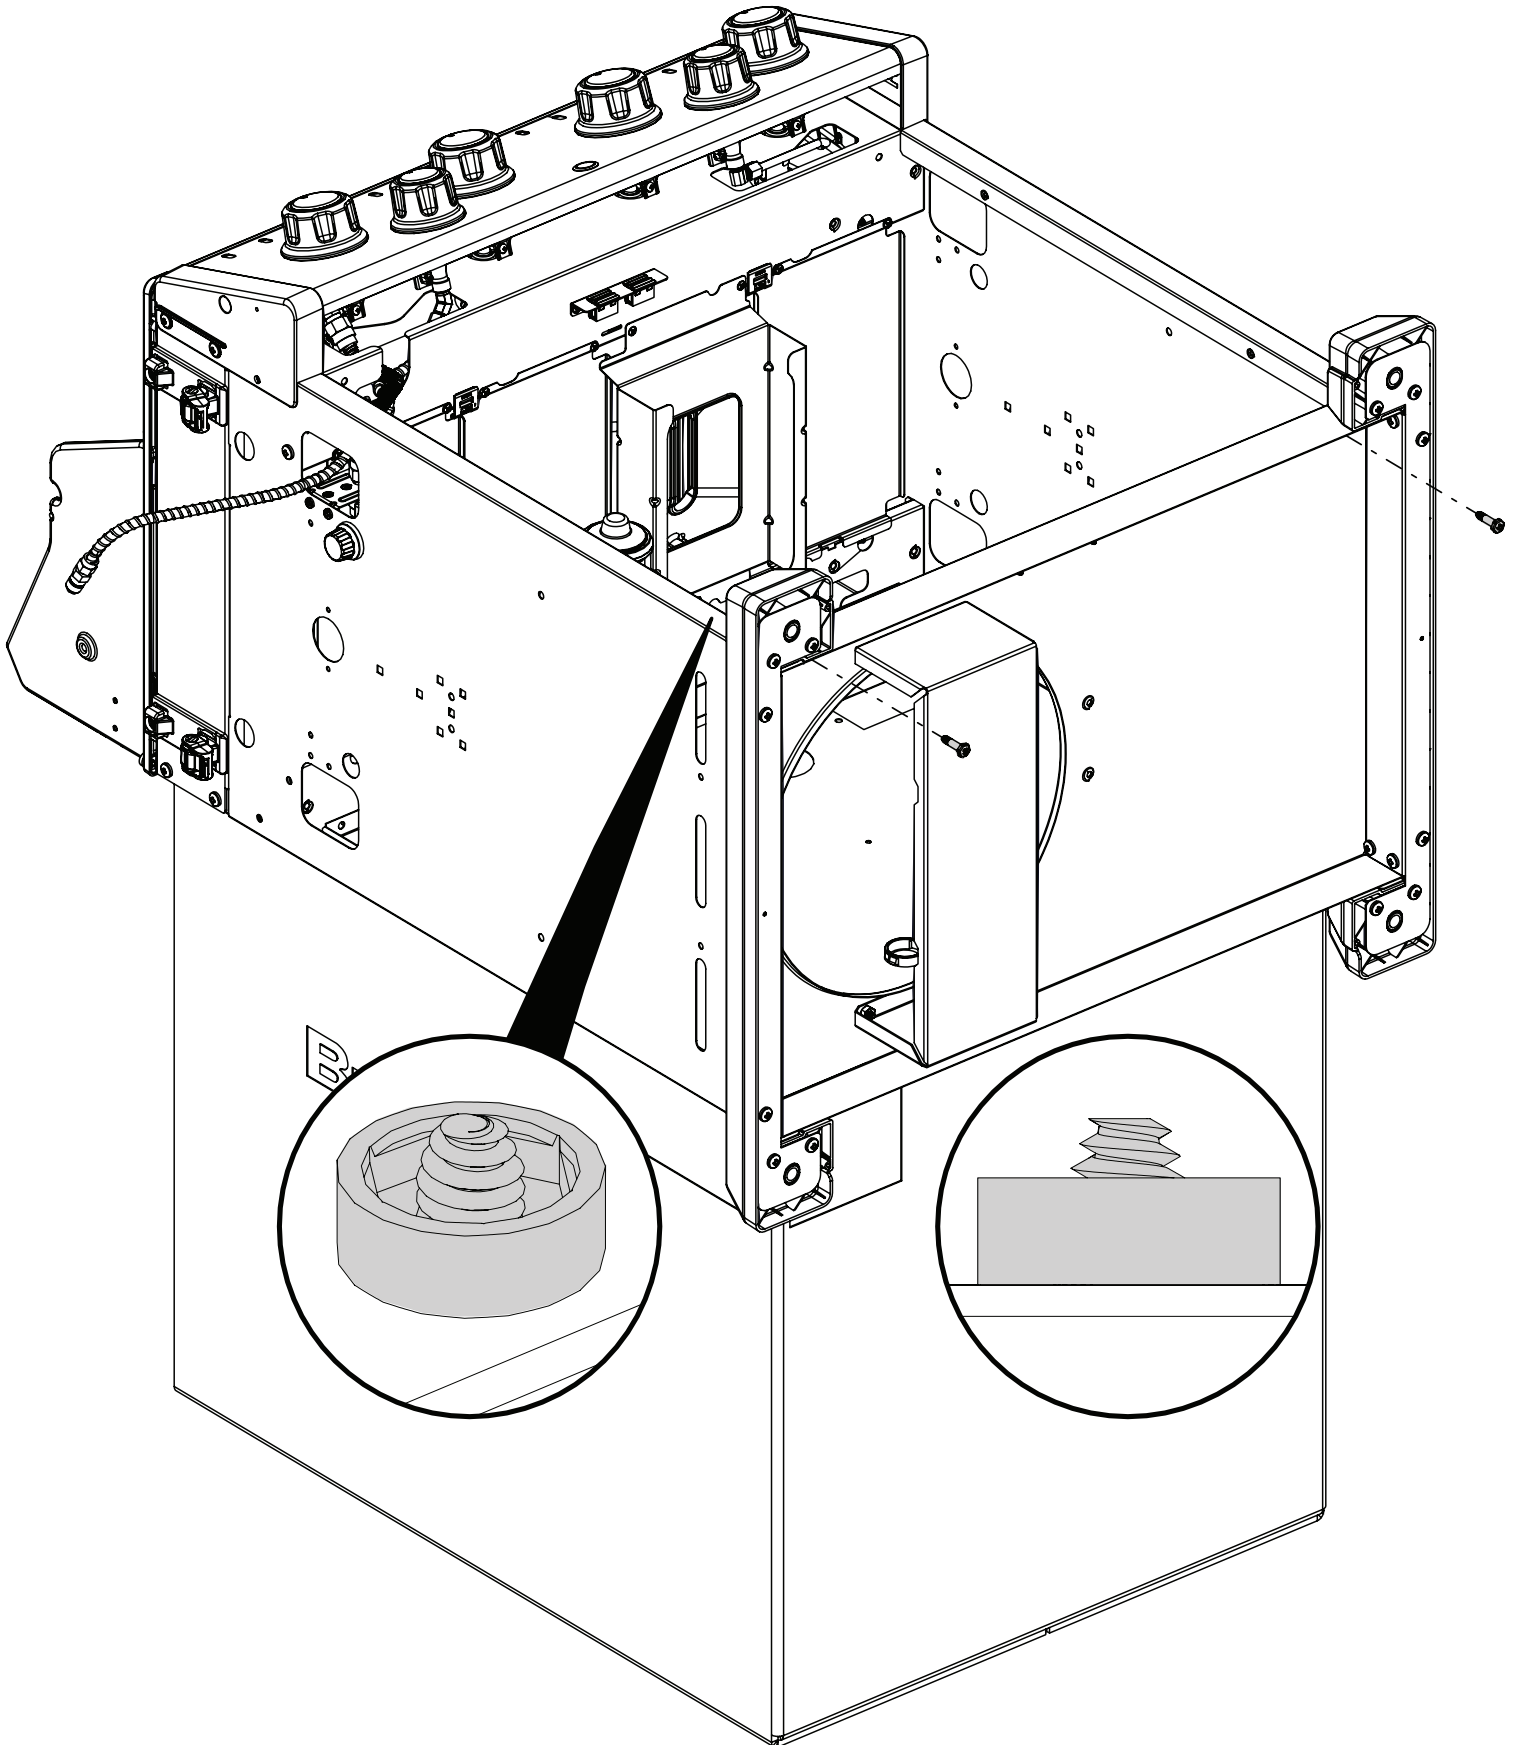   


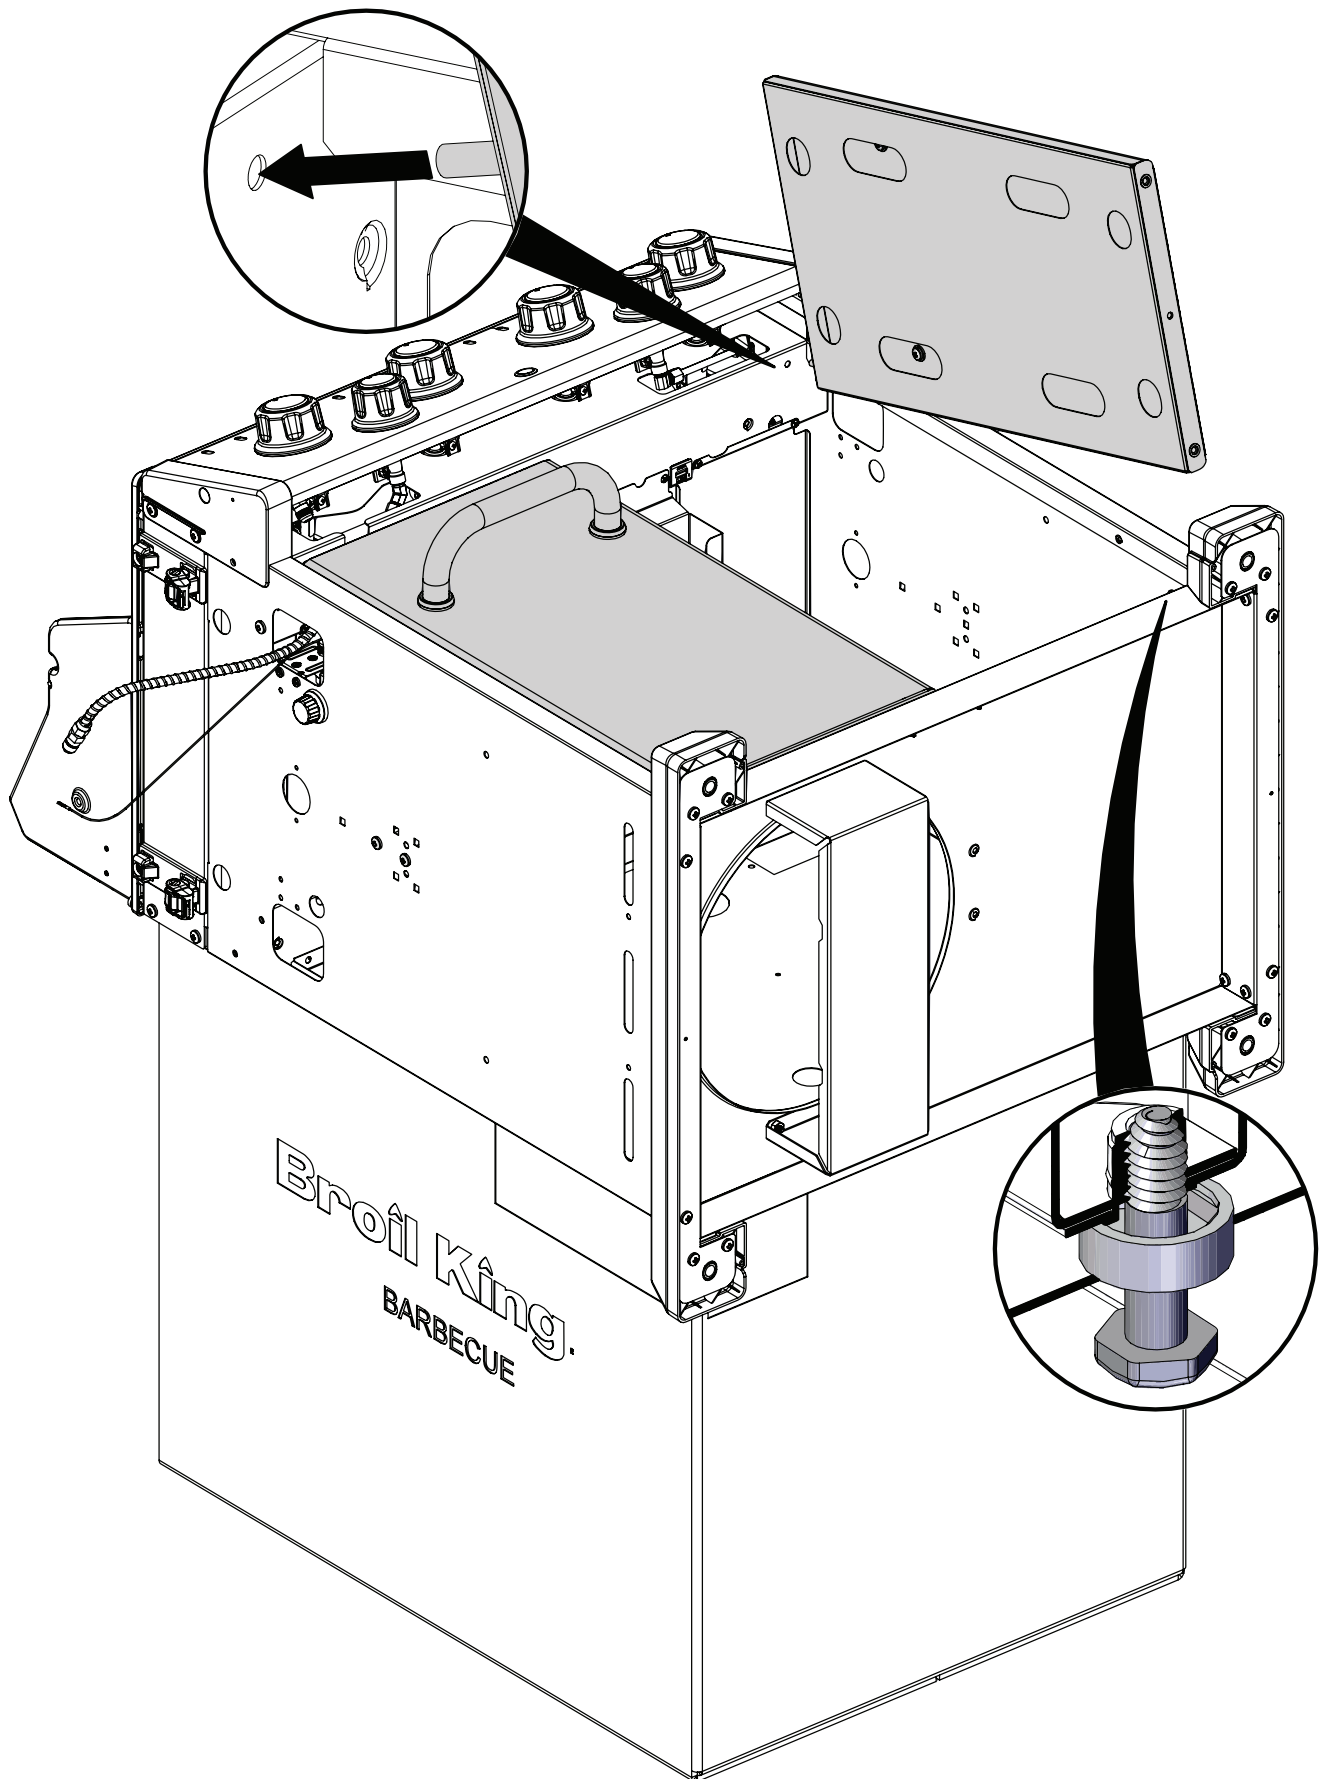 


13

 
 
(4)



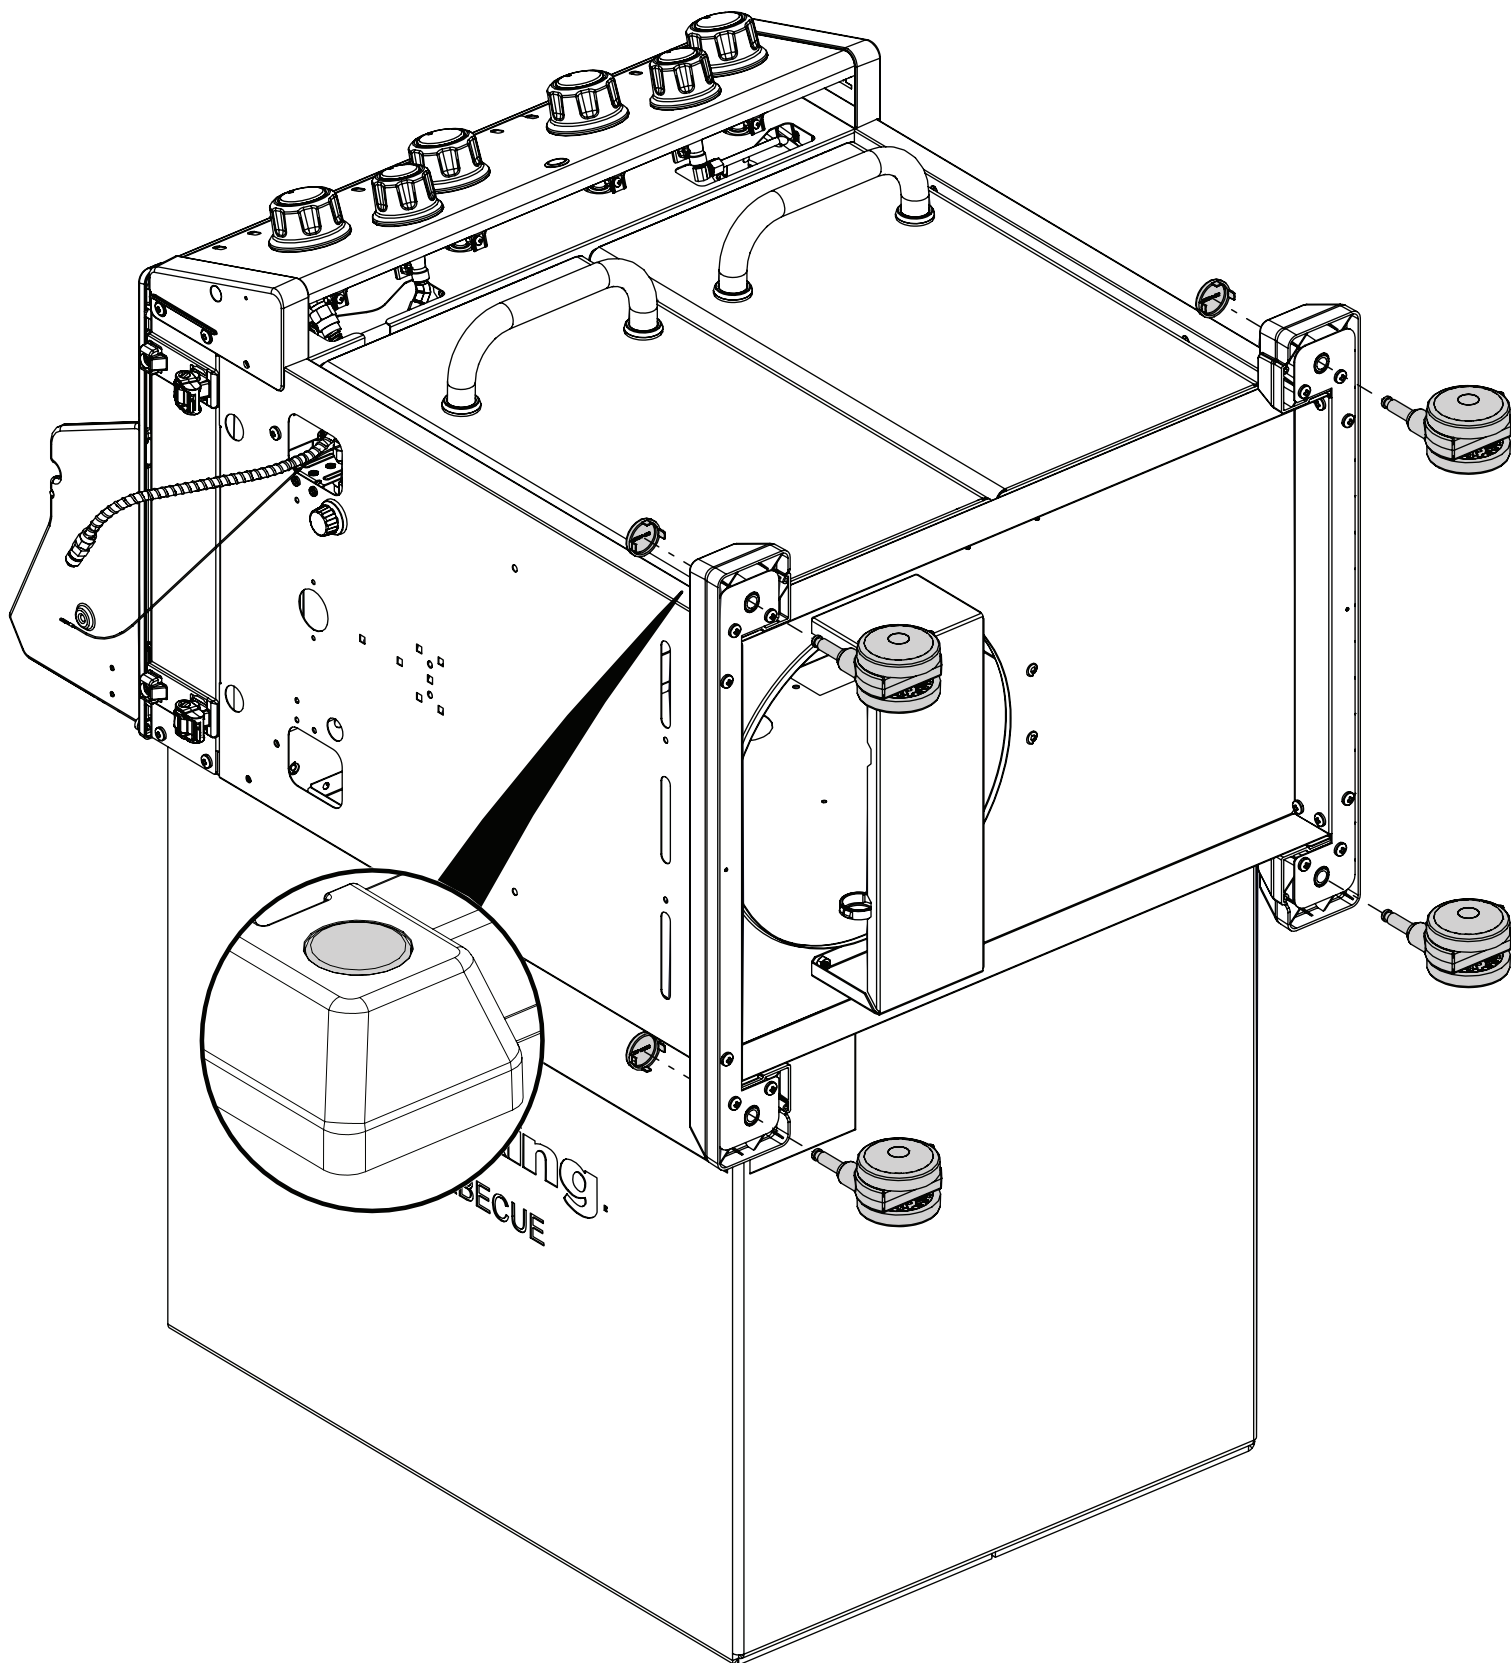
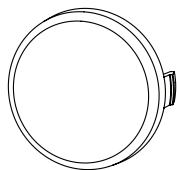


14

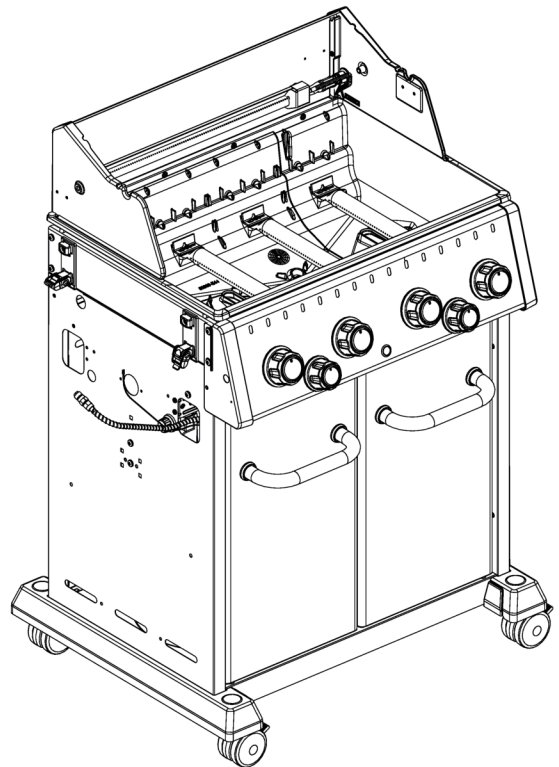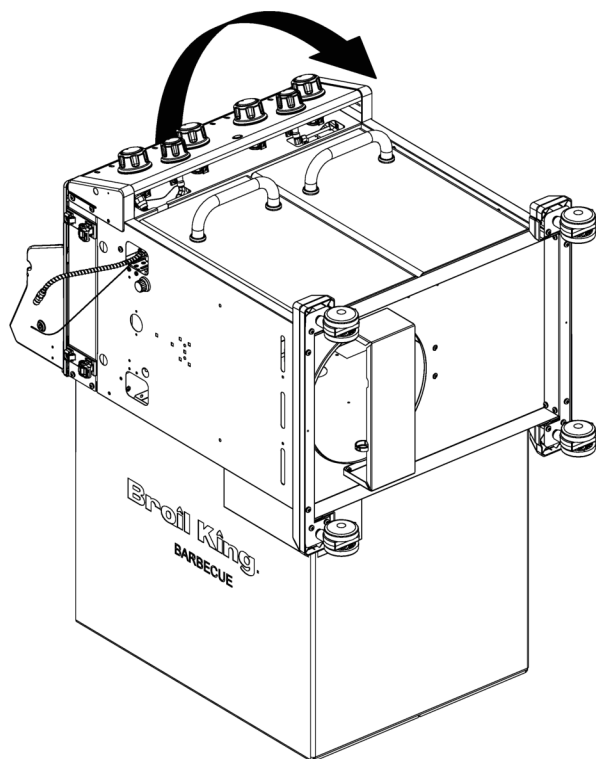  


15

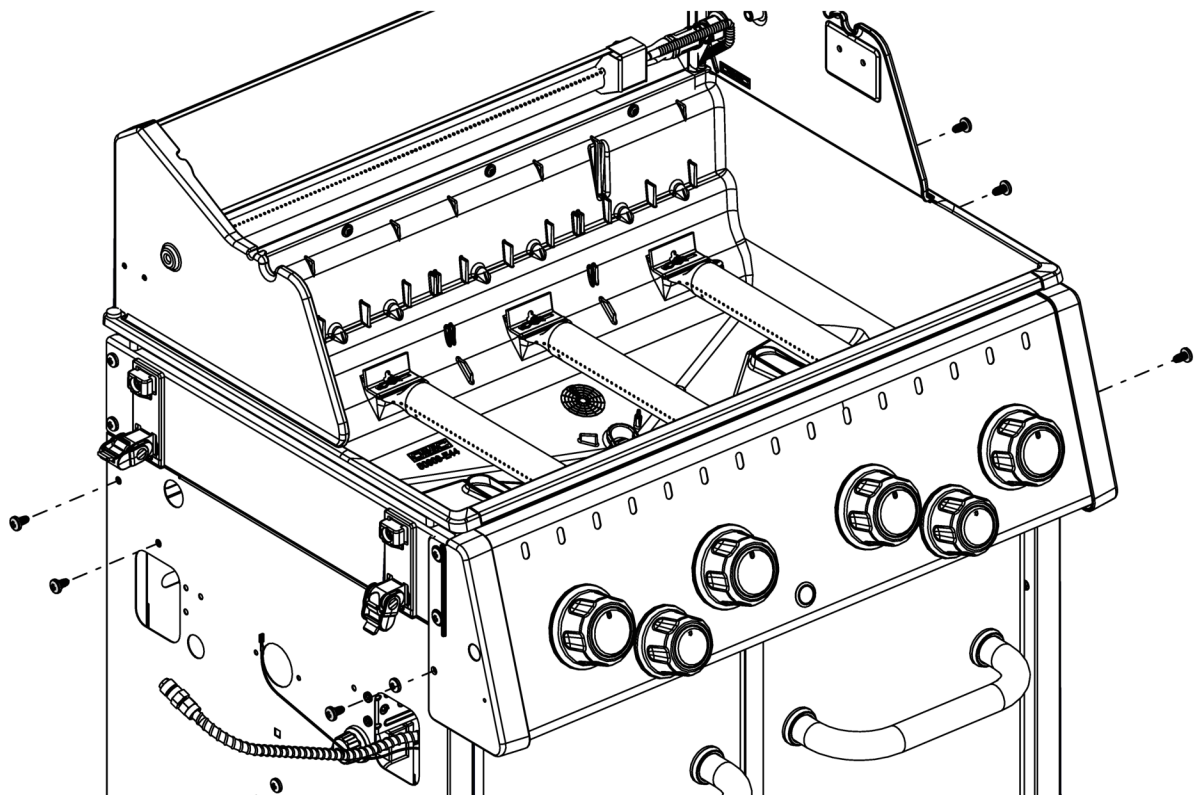 
 


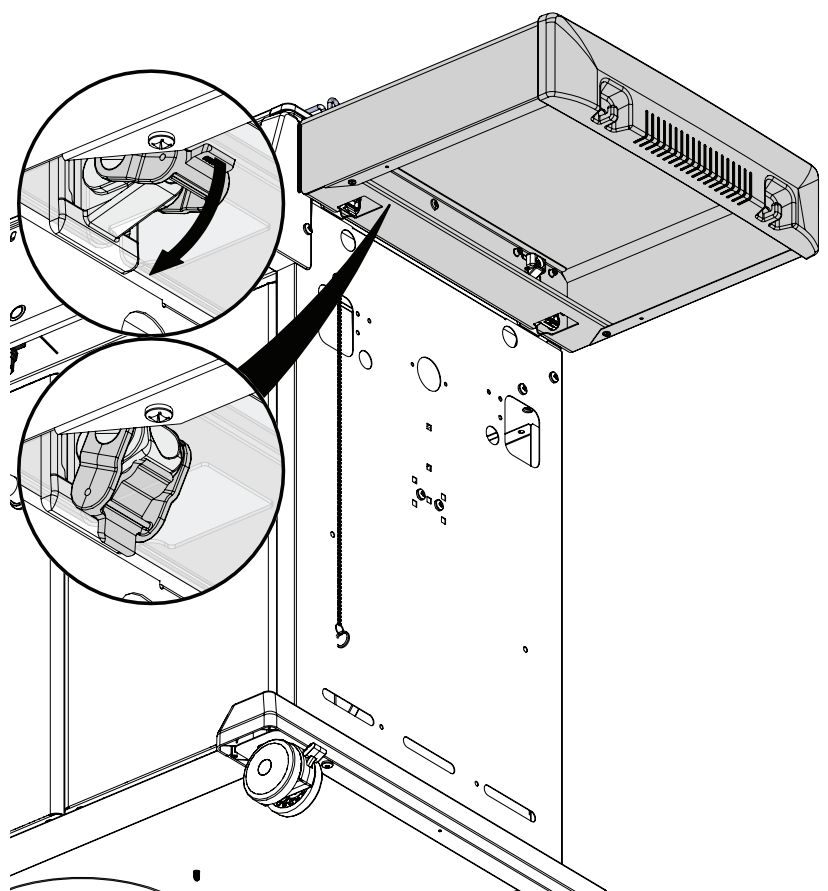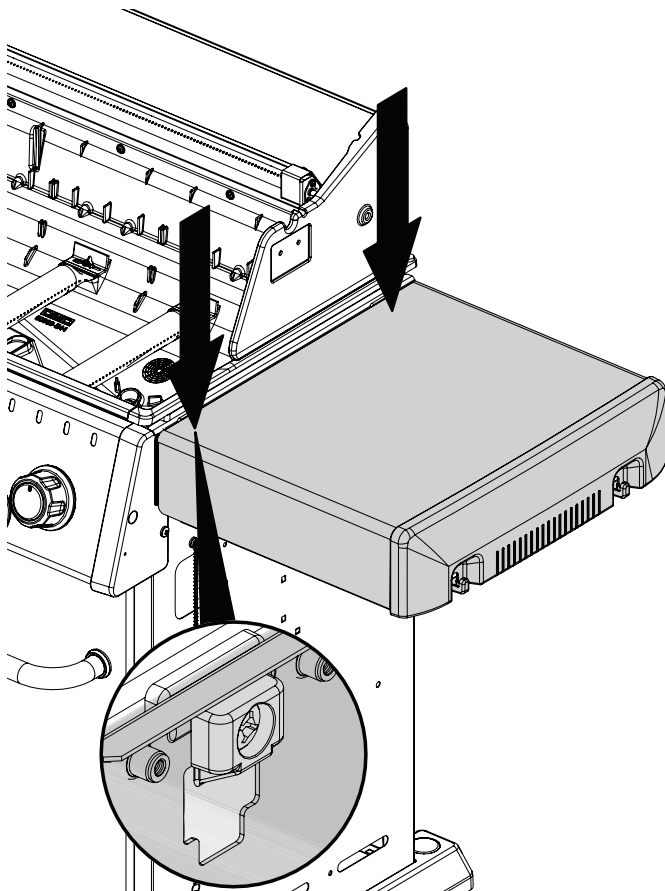  
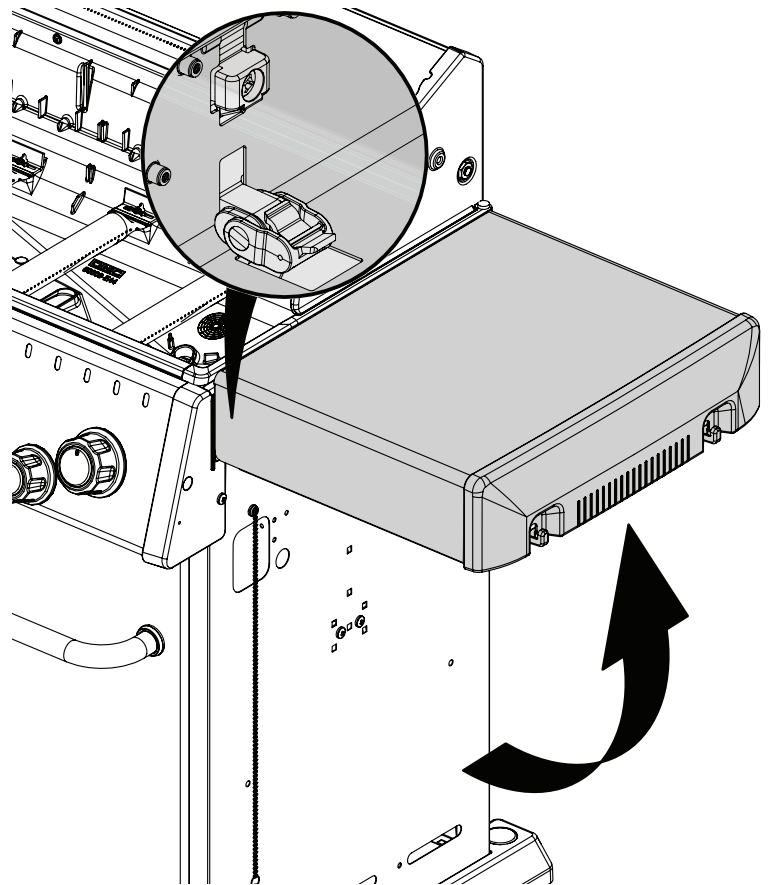 
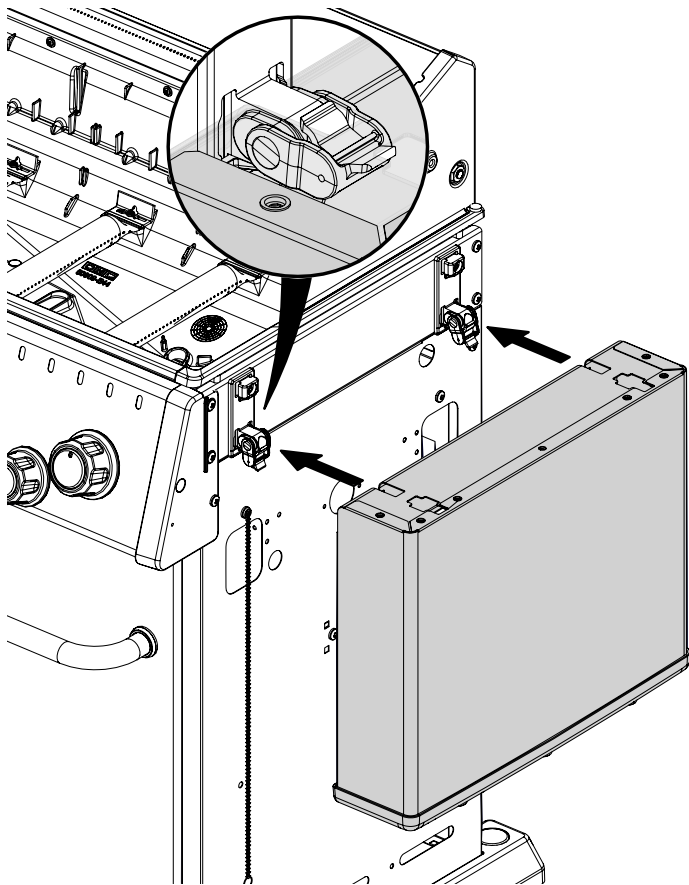 




17

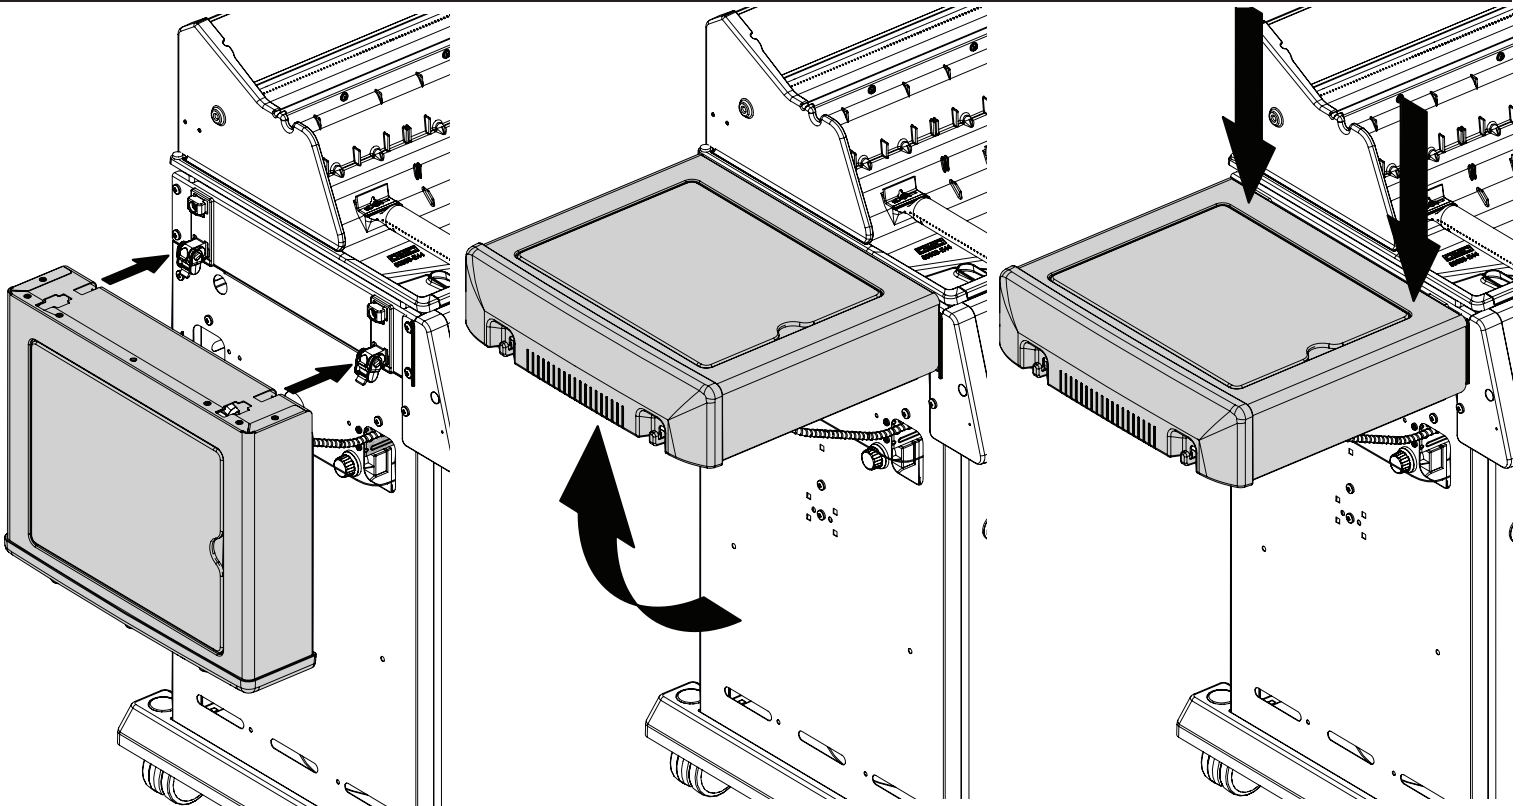 



18

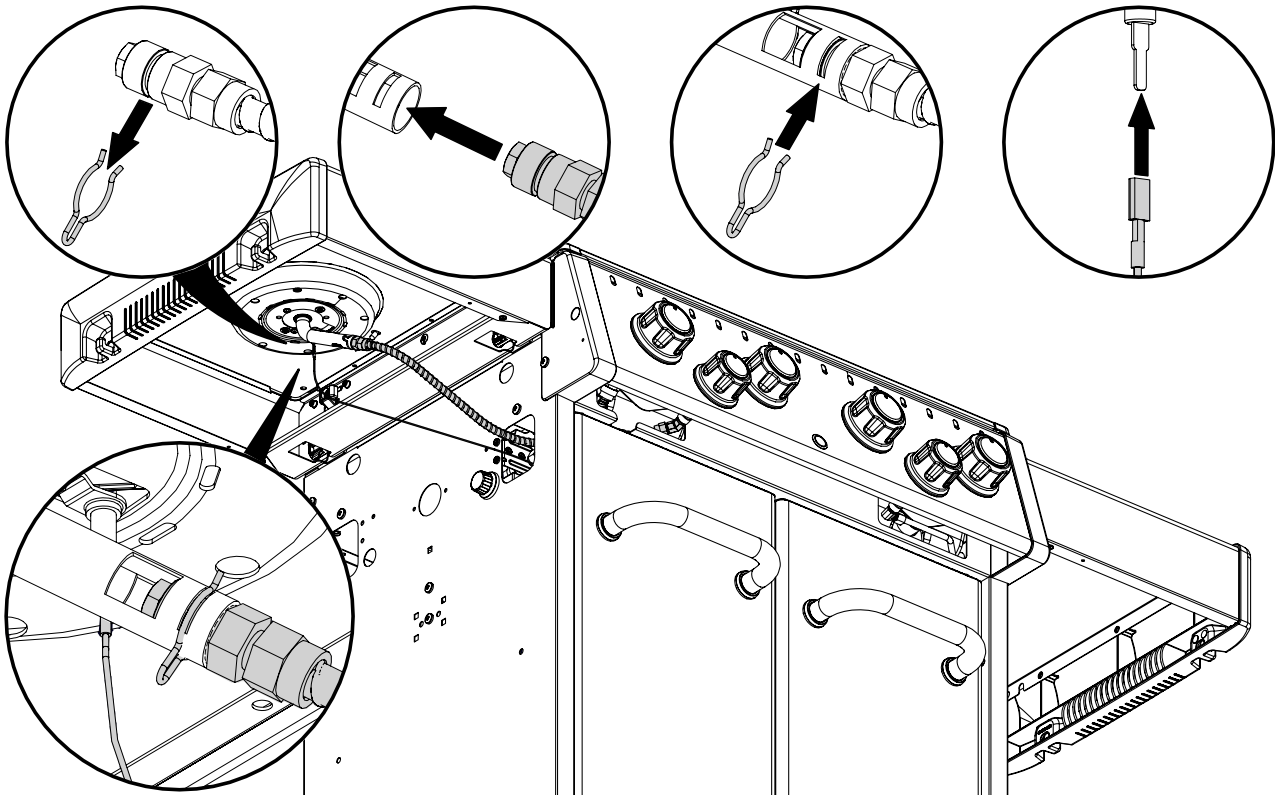  

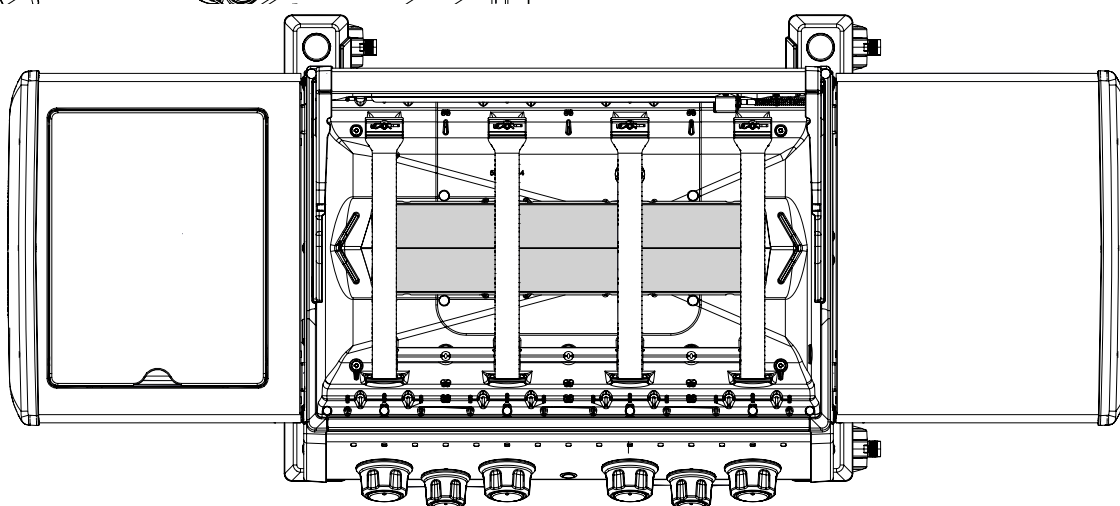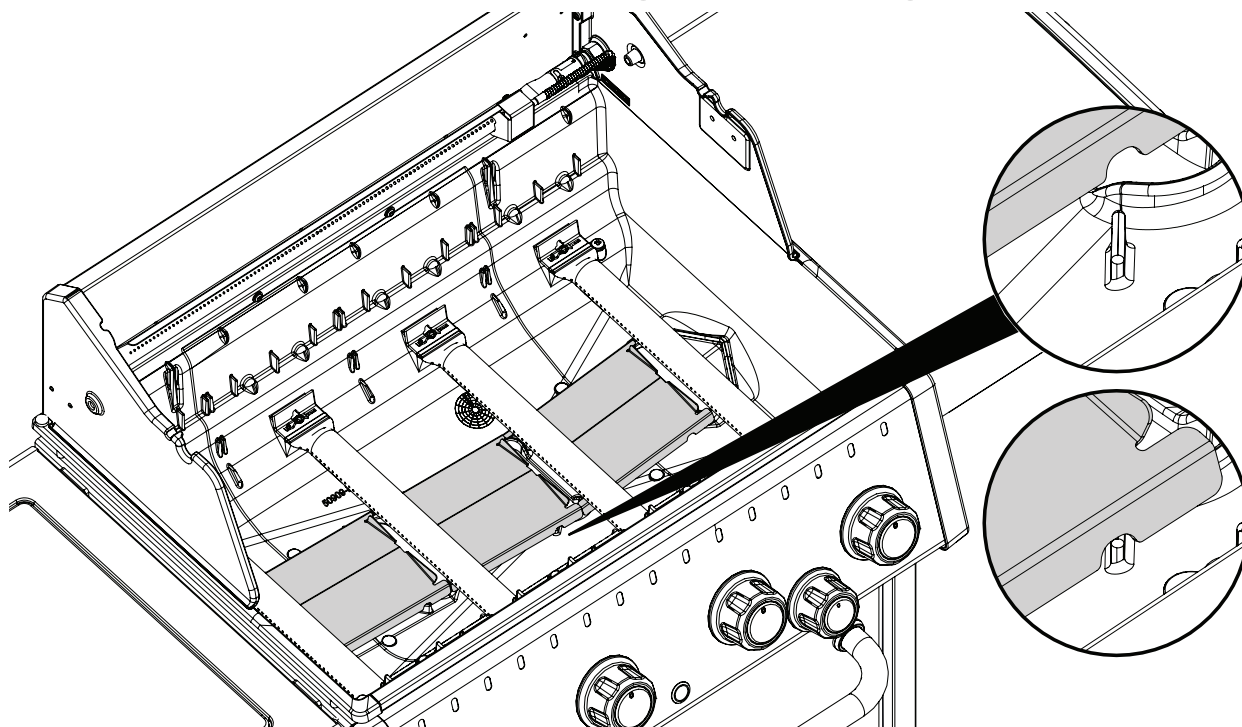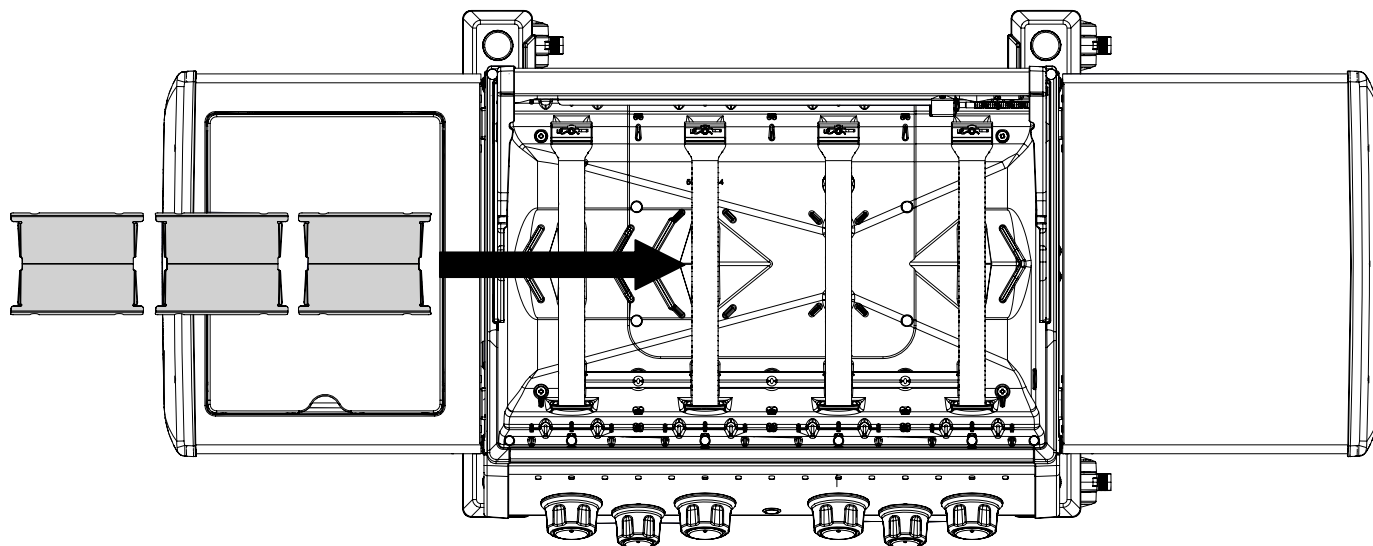   


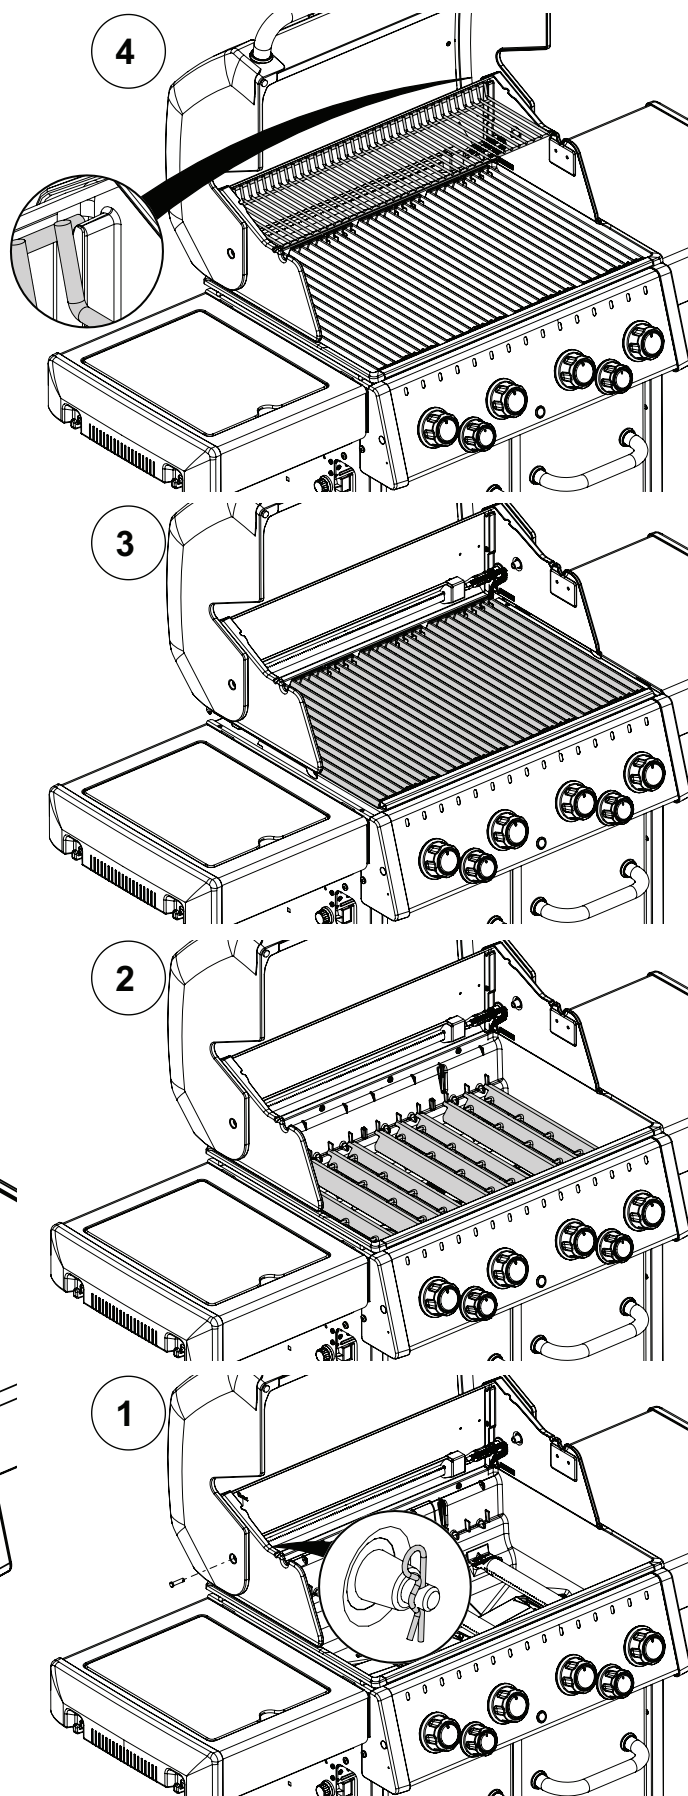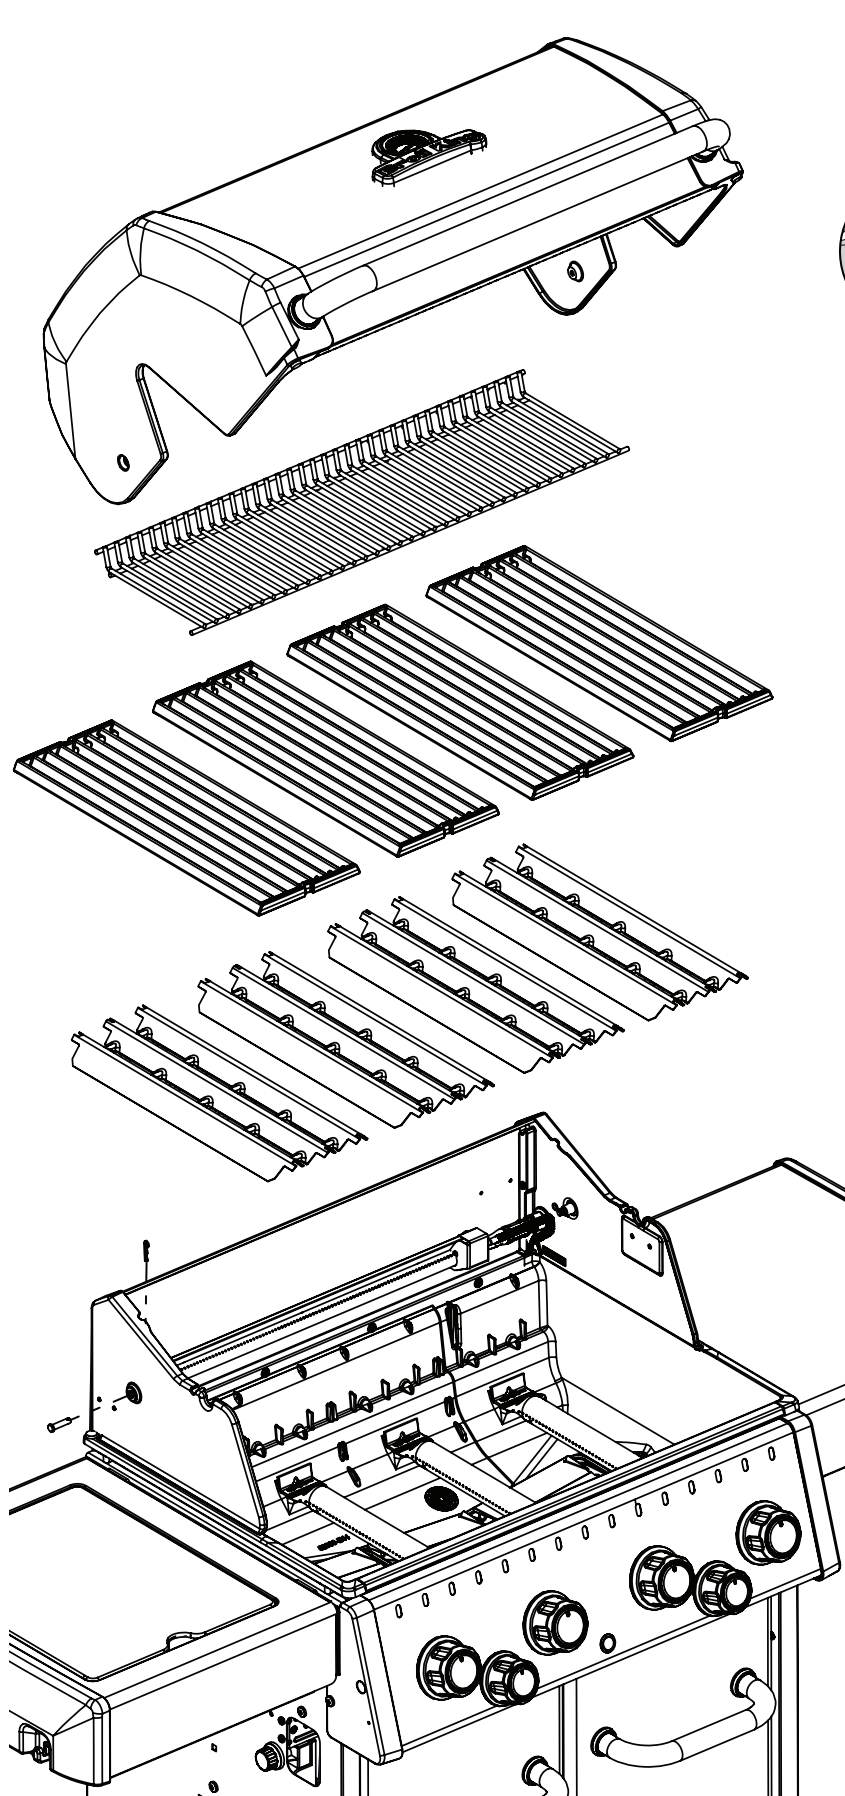  


21

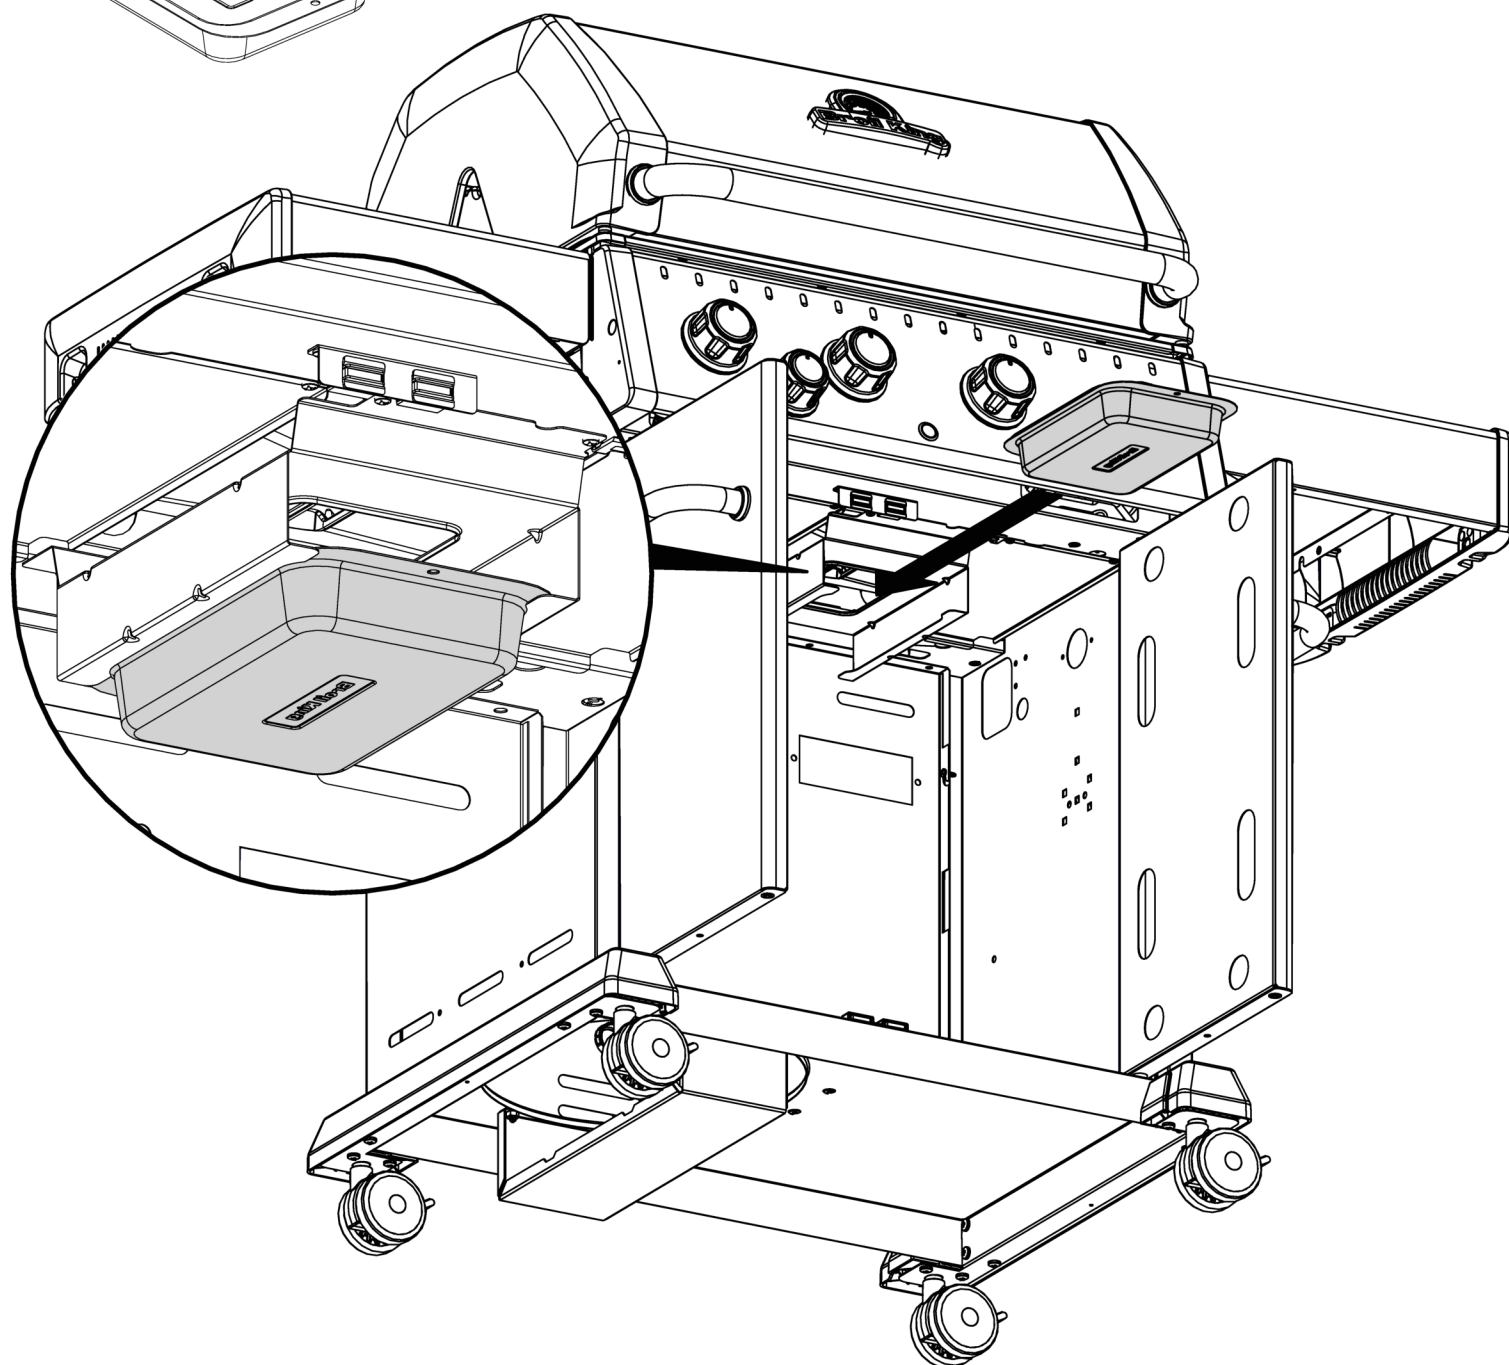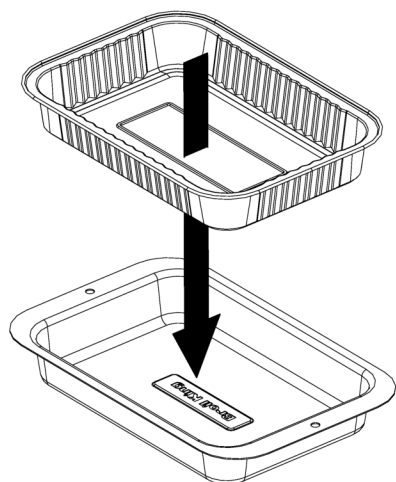  


22

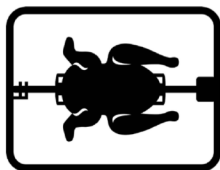 


 (2)



  (2)

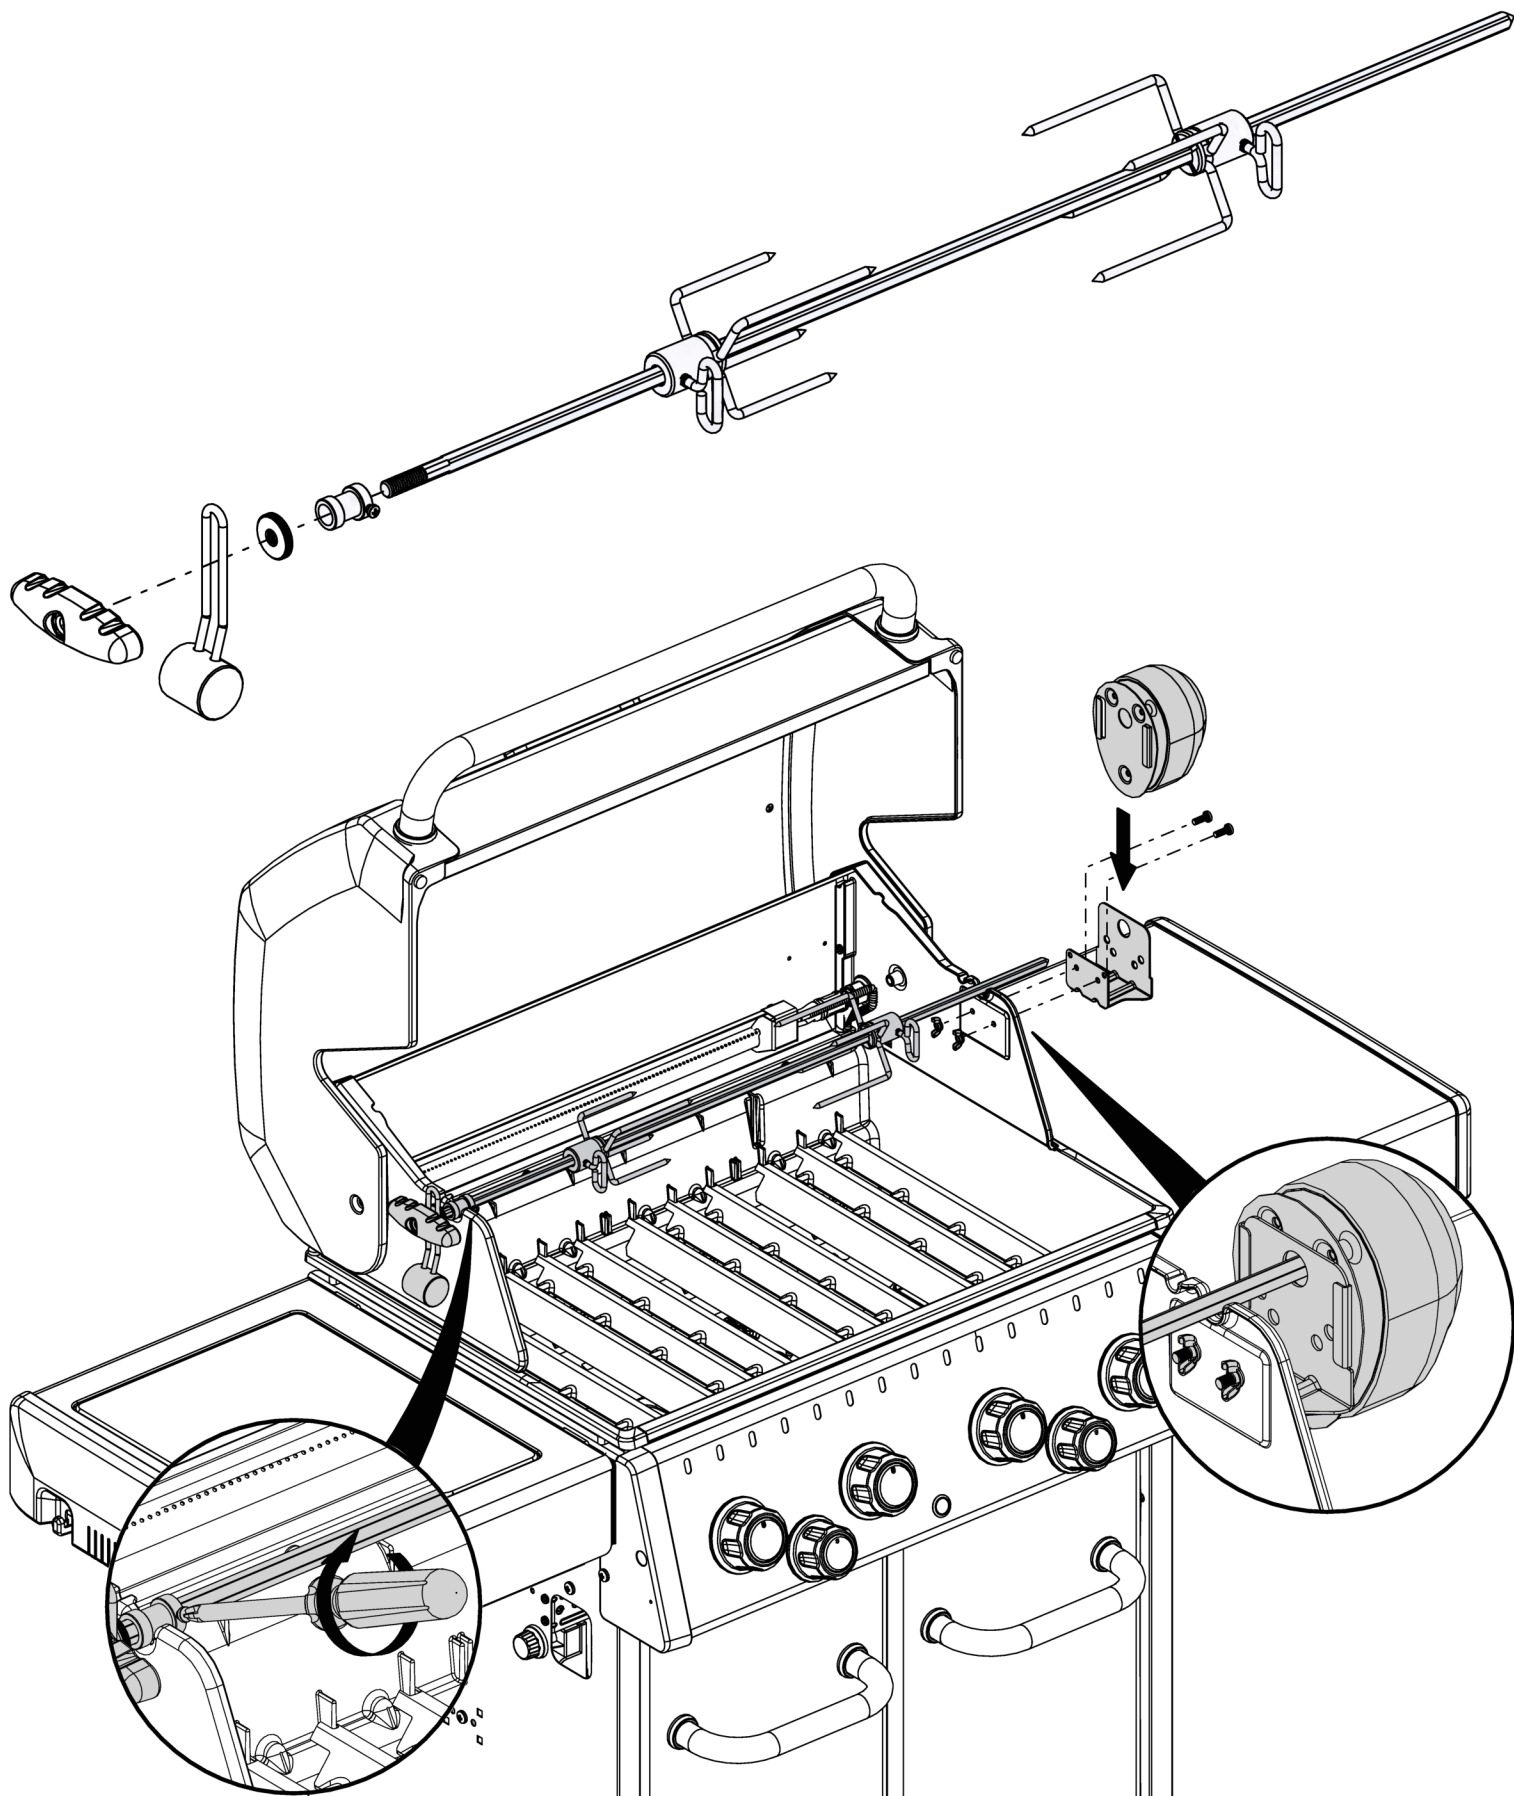

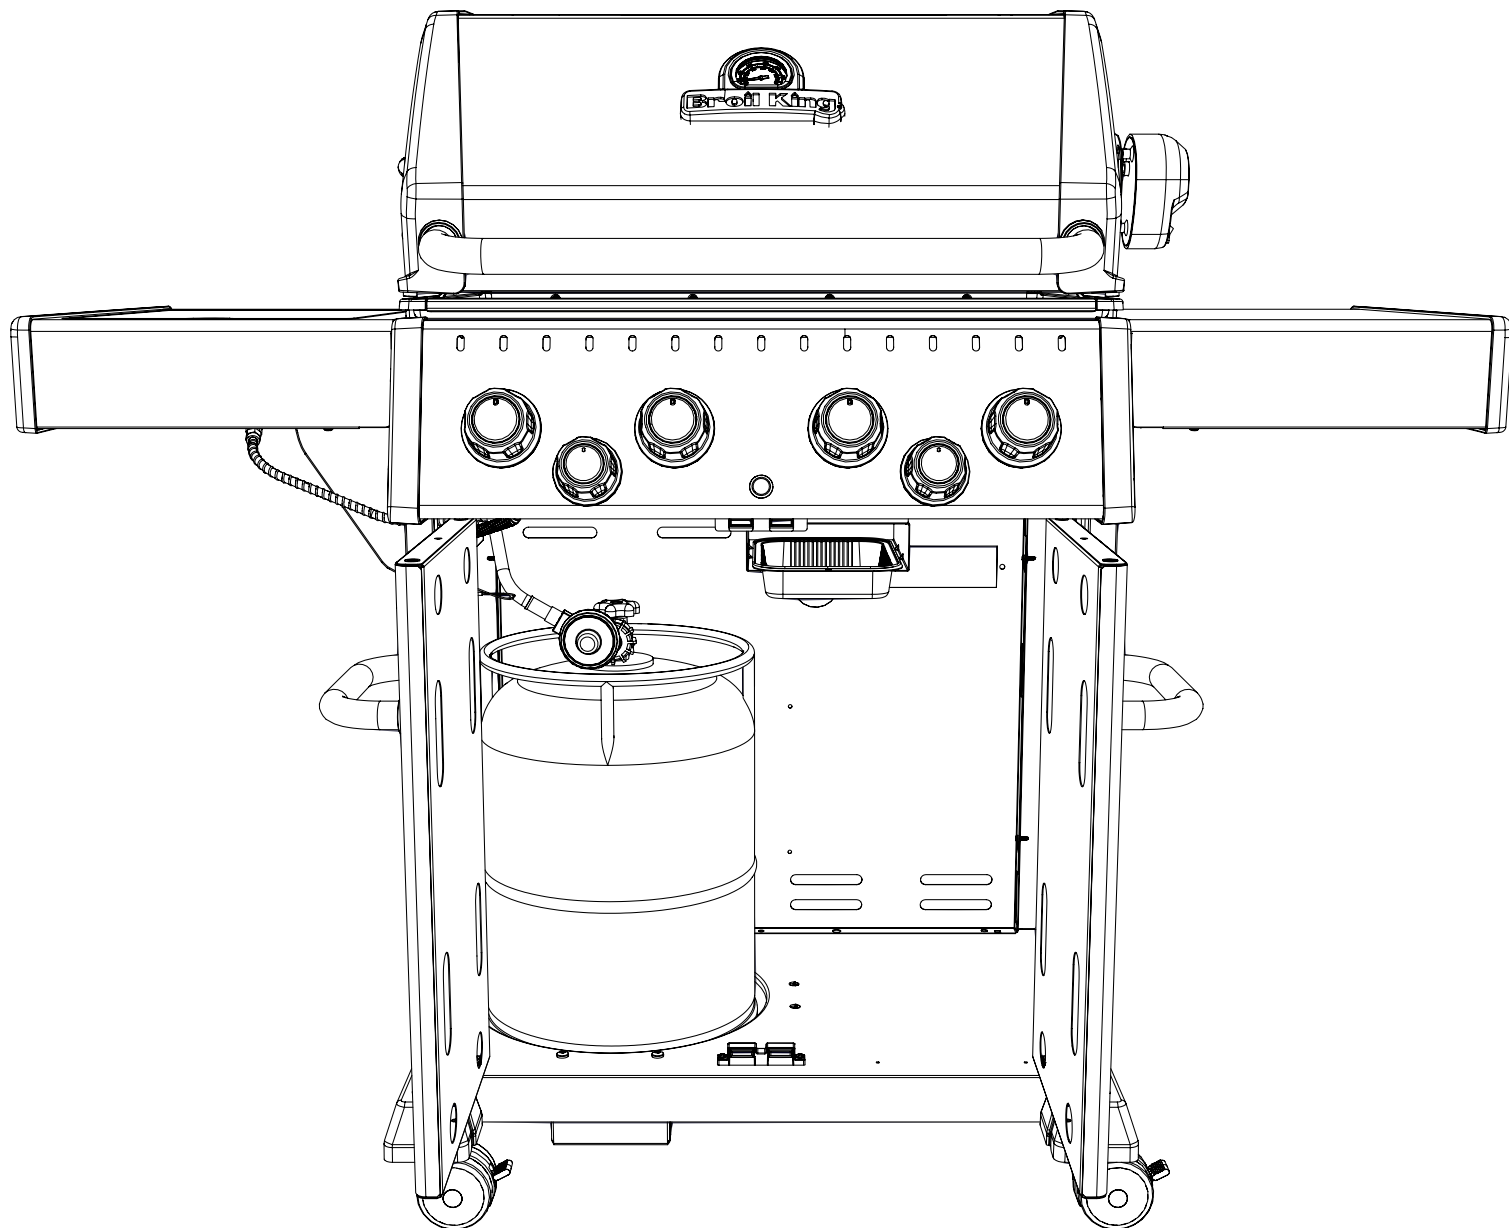

PARTS LIST / LISTE DES PIÉCES

KEY #	ITEM #	DESCRIPTION	8652-52	8652-53	8652-62	8652-63	8652-82	8652-83	8653-52	8653-53	8653-62	8653-63	8653-82	8653-83
1	52005-107	FIREBOX ASSEMBLY	1	1	1	1	1	1	1	1	1	1	1	1
2	56005-801	LID ASSEMBLY	1	1	1	1	1	1	•	•	•	•	•	•
	56005-804	LID ASSEMBLY	•	•	•	•	•	•	1	1	1	1	1	1
7	Y-11544S	SCREW - BURNER	4	4	4	4	4	4	4	4	4	4	4	4
8	S21242	BURNER CLIP	4	4	4	4	4	4	4	4	4	4	4	4
18	52001-981	COOKING GRID	4	4	4	4	4	4	4	4	4	4	4	4
20	52005-991	GRID - WARMING RACK	1	1	1	1	1	1	1	1	1	1	1	1
21	59805-012	CONTROL ASSEMBLY	1	•	•	•	•	•	1	•	•	•	•	•
	59805-013	CONTROL ASSEMBLY	•	1	•	•	•	•	•	1	•	•	•	•
	59805-032	CONTROL ASSEMBLY	•	•	1	•	•	•	•	•	1	•	•	•
	59805-033	CONTROL ASSEMBLY	•	•	•	1	•	•	•	•	•	1	•	•
	59805-072	CONTROL ASSEMBLY	•	•	•	•	1	•	•	•	•	•	1	•
	59805-073	CONTROL ASSEMBLY	•	•	•	•	•	1	•	•	•	•	•	1
22	22025-903A	COLLECTOR BOX	1	1	1	1	1	1	1	1	1	1	1	1
24	10111-16A	CONNECTOR HOSE	1	1	1	1	1	1	1	1	1	1	1	1
25	18631	BURNER	4	4	4	4	4	4	4	4	4	4	4	4
26	52002-298A	CONTROL KNOB	4	4	4	4	4	4	4	4	4	4	4	4
27	52001-298A	CONTROL KNOB	•	•	1	1	2	2	•	•	1	1	2	2
28	52025-124CRO	CONTROL COVER	1	1	•	•	•	•	1	1	•	•	•	•
	52025-244CRO	CONTROL COVER	•	•	1	1	•	•	•	•	1	1	•	•
	52025-304CRO	CONTROL COVER	•	•	•	•	1	1	•	•	•	•	1	1
31	52009-918	EDGE CAP - LH	1	1	1	1	1	1	1	1	1	1	1	1
32	52009-938	EDGE CAP - RH	1	1	1	1	1	1	1	1	1	1	1	1
34A	Y-11230	COTTER PIN	•	•	1	1	1	1	•	•	1	1	1	1
37	53139-908	SHELF BRACKET SUPPORT	4	4	4	4	4	4	4	4	4	4	4	4
38	Y-12620	SHELF LOCK CLIP	4	4	4	4	4	4	4	4	4	4	4	4
41	10342-E13	ELECTRODE	1	1	1	1	1	1	1	1	1	1	1	1
42	10342-E22	ELECTRODE	1	1	1	1	1	1	1	1	1	1	1	1
44	53005-001A	ELECTRONIC IGNITOR	1	1	•	•	•	•	1	1	•	•	•	•
	53005-003A	ELECTRONIC IGNITOR	•	•	1	1	•	•	•	•	1	1	•	•
	53005-007A	ELECTRONIC IGNITOR	•	•	•	•	1	1	•	•	•	•	1	1
44A	25070-925	WIRE - IGNITOR	1	1	1	1	1	1	1	1	1	1	1	1
44B	25070-931	BUTTON - IGNITOR	1	1	1	1	1	1	1	1	1	1	1	1
48	52004-007	DRIP PAN	1	1	1	1	1	1	1	1	1	1	1	1
49	51009-007	GREASE PAN	1	1	1	1	1	1	1	1	1	1	1	1
50	52060-101	GREASE RAIL	1	1	1	1	1	1	1	1	1	1	1	1
51	18431	FLAV-R-WAVE ®	4	4	4	4	4	4	4	4	4	4	4	4
52	52149-004	GREASE SHIELD	3	3	3	3	3	3	3	3	3	3	3	3

PARTS LIST / LISTE DES PIÉCES

KEY #	ITEM #	DESCRIPTION	8652-52	8652-53	8652-62	8652-63	8652-82	8652-83	8653-52	8653-53	8653-62	8653-63	8653-82	8653-83
56	24005-12A	HANDLE	1	1	1	1	1	1	1	1	1	1	1	1
58	24009-936	BEZEL	2	2	2	2	2	2	2	2	2	2	2	2
59	10081-BK630	NAMEPLATE	1	1	1	1	1	1	1	1	1	1	1	1
60	18013	HEAT INDICATOR	1	1	1	1	1	1	1	1	1	1	1	1
62	53409-148	SHELF END CAP	2	2	2	2	2	2	2	2	2	2	2	2
65	20005-000	MATCH LIGHT - STICK	1	1	1	1	1	1	1	1	1	1	1	1
68	51275-111A	DOOR	1	1	1	1	1	1	•	•	•	•	•	•
	51275-114A	DOOR	•	•	•	•	•	•	1	1	1	1	1	1
69	51275-131A	DOOR	1	1	1	1	1	1	•	•	•	•	•	•
	51275-134A	DOOR	•	•	•	•	•	•	1	1	1	1	1	1
70	21071-13	HANDLE	2	2	2	2	2	2	2	2	2	2	2	2
71	21070-13	BEZEL	4	4	4	4	4	4	4	4	4	4	4	4
78	56039-214A	MAGNET BRACKET	1	1	1	1	1	1	1	1	1	1	1	1
80	51189-101A	SIDE PANEL	2	2	2	2	2	2	2	2	2	2	2	2
87	Y-11793	NUT 1/4-20	4	4	4	4	4	4	4	4	4	4	4	4
88	21305-921	PANEL - REAR	1	1	1	1	1	1	1	1	1	1	1	1
90	51625-131	BASE	1	1	1	1	1	1	1	1	1	1	1	1
99	32001-151	CASTOR BRACKET CAP	4	4	4	4	4	4	4	4	4	4	4	4
100	51639-108	CASTOR BRACKET	2	2	2	2	2	2	2	2	2	2	2	2
102	10892-286	CASTOR	4	4	4	4	4	4	4	4	4	4	4	4
103	21039-301	TANK BRACKET	1	1	1	1	1	1	1	1	1	1	1	1
113	10342-T14	SIDE BURNER ELECTRODE	1	1	1	1	1	1	1	1	1	1	1	1
114	53109-111	SHELF - RIGHT	1	1	1	1	1	1	1	1	1	1	1	1
115	53109-111	SHELF - LEFT	1	1	•	•	•	•	1	1	•	•	•	•
	53109-151	SHELF - SB - LEFT	•	•	1	1	1	1	•	•	1	1	1	1
123	Y-12117	BUSHING	•	•	2	2	2	2	•	•	2	2	2	2
124	53004-271	SIDE BURNER BODY	•	•	1	1	1	1	•	•	1	1	1	1
125	53000-251	SIDE BURNER COVER	•	•	1	1	1	1	•	•	1	1	1	1
126	10390-E10D	SIDE BURNER	•	•	1	•	1	•	•	•	1	•	1	•
	10390-E10E	SIDE BURNER	•	•	•	1	•	1	•	•	•	1	•	1
128	53009-951	GRID	•	•	1	1	1	1	•	•	1	1	1	1
129	Y-11990	HEX NUT	•	•	•	•	1	1	•	•	•	•	1	1
130	27905-354	BURNER ROTISSERIE	•	•	•	•	1	1	•	•	•	•	1	1
133	S15278	ROTISSERIE HARDWARE	•	•	•	•	1	1	•	•	•	•	1	1
137	S15256	SPIT ROD	•	•	•	•	1	1	•	•	•	•	1	1
138	S15287	4 PRONG FORKS	•	•	•	•	2	2	•	•	•	•	2	2
139	20006-000	ROTISSERIE BRACKET	•	•	•	•	1	1	•	•	•	•	1	1
141	Y-11559	BOLT 1/4-20 X 1	2	2	2	2	2	2	2	2	2	2	2	2

PARTS LIST / LISTE DES PIÉCES

[illegible]

